Panasonic®

Digital Video Camcorder

Operating Instructions

Models No. PV-DV201/ PV-DV401

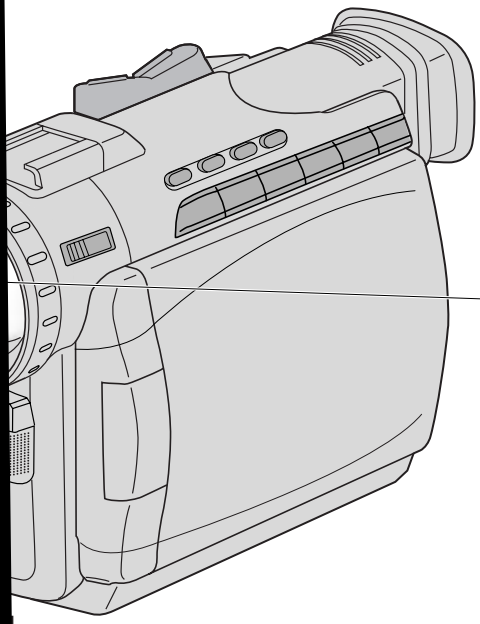

ard™ SD™ Mini DV

erate or adjust this product, please read these

cluded.
spañol está incluida.

1-800-211-PANA(7262) or
oducts@panasonic.com

0364A

LSQT0364A

Things You Should Know

Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located
on the underside of your Palmcorder. Be sure to **retain this manual** as your convenient Palmcorder information source.

Date of Purchase

Dealer Purchased From

Dealer Address

Dealer Phone No.

Model No.

Serial No.

Safety Precautions

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

Your Mini DV Palmcorder is designed to record and play back in Standard Play (SP) mode and Long (LP) mode.
It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the Mini DV mark be used.

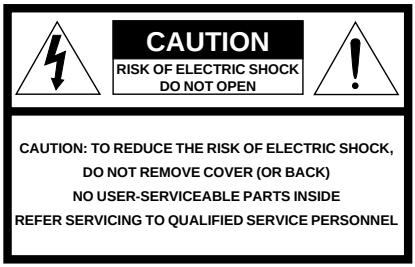
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

The above markings are located on the appliance bottom cover.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.
If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.
If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

FCC Warning: To assure continued FCC compliance, use only the provided shielded interface cable when connecting digital video camera to computer in accordance with instruction herein. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate.

Important Safeguards

1. Read Instructions — All the safety and operating instructions should be read before the unit is operated.
2. Retain Instructions — The safety and operating instructions should be retained for future reference.
3. Heed Warnings — All warnings on the unit and in the operating instructions should be adhered to.
4. Follow Instructions — All operating and maintenance instructions should be followed.
5. Cleaning — Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
6. Attachments — Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
7. Water and Moisture — Do not use this video unit near water — for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories — Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. Ventilation — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources — This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization — This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin.

    The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

    The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
12. Power-Cord Protection — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
13. Outdoor Antenna Grounding — If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

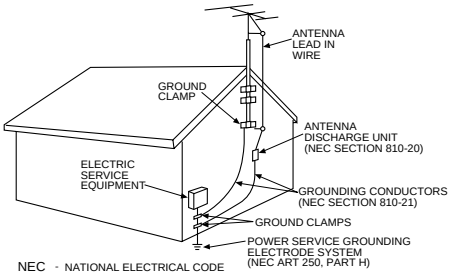
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)
NEC - NATIONAL ELECTRICAL CODE

14. Lightning — For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

Important Safeguards

15. Power Lines — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. Overloading — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. Objects and Liquids — Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. Servicing — Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. Damage Requiring Service — Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    a. When the power-supply cord or plug is damaged.
    b. If any liquid has been spilled into, or objects have fallen onto, the video unit.
    c. If the video unit has been exposed to rain or water.
    d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
    e. If the video unit has been dropped or the cabinet has been damaged.
    f. When the video unit exhibits a distinct change in performance — this indicates a need for service.
20. Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Safety Check— Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

Precautions

USE & LOCATION

- **TO AVOID SHOCK HAZARD ...** Your Palmcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Palmcorder if it gets wet. Your Palmcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Palmcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Palmcorder from the power supply before cleaning.
- **DO NOT AIM YOUR PALMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS**
- **DO NOT LEAVE THE PALMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF**
- **DO NOT EXPOSE YOUR PALMCORDER TO EXTENDED HIGH TEMPERATURE ...** Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Palmcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR PALMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR PALMCORDER ...** Store and handle your Palmcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Palmcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

CARE

- **TO CLEAN YOUR PALMCORDER ...** Do not use strong or abrasive detergents when cleaning your Palmcorder body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial Palmcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR PALMCORDER ...** Before handling your Palmcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Table of Contents

Getting Started

Things You Should Know 2
Important Safeguards 3
Precautions 4
Before Using 6
Quick Guide 9
Supplying Power 11
Setting the Clock 13
Using the Palmcorder Menu 14
MENU OSD 15
Electronic Viewfinder/LCD Monitor Indications 19

Basic Operation

Camera Recording 22
Remote Control (Optional) 26
Playback Your Recordings 27

Special Features

Card Features 32
Dual Digital Electronic Image Stabilization System (D.E.I.S.) 39
Digital Zoom 40
Digital PhotoShot 41
Index Search 41
White Balance 42
Recording Still Pictures 42
MAGICVU/0LUX (PV-DV401 only) 42
Program AE 43
Other Digital Functions 44
Picture in Picture (PinP) 45
Strobe Multi Mode 46
Focus 47
Backlight 47
Audio/Video Fade In/Out 48
High Speed Shutter 48
Audio Dubbing using the External or Built-in Microphone 49
Memory-Stop Editing 50
Copying your Tapes to S-VHS or VHS Cassette 51
Copying from Digital Equipment (dubbing) 52
Transferring Your Images 53
Transferring Your Images (i.LINK) 62

For Your Information

Palmcorder Accessory System 64
Palmcorder Accessory Order Form 66
Notes On Operations 67
Specifications 68
Before Requesting Service 69
Request for Service Notice 71
Index of Controls 72
Limited Warranty 76
Servicenter List 77
Spanish Quick Use Guide/Guía Para Uso Rápido 78
Index ..... Back Cover

Before Using

This operating Instructions book is designed for u
PV-DV401. The PV-DV401 is the model used for
Features may vary, so please read carefully.

Differences between models

Model Number	PV-D
LCD Monitor	63.5 mm Crystal
Viewfinder	B
MAGICVU/0LUX	
MIC IN EXTERNAL	

Unpack your Palmco

1 pc. AC Adaptor
(PV-DAC11) with AC Cable



1 pc. A/V Cable
(LSJA0280)



1 pc. CD-ROM
Windows 98/M
Driver for Wi
USB) for Wi
LINK/Movie
Me/ ArcSo
(LSFT024

Cassette Insertion/Removal

• If the Palmcorder is connected to a power source, the cassette can be inserted and ejected without turning the Palmcorder on.

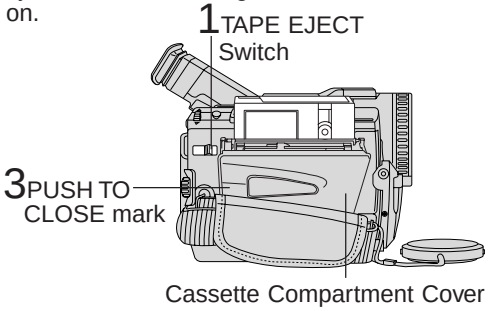

Before you begin

• Connect the Palmcorder to a power source. (See pages 11, 12.)

1 **Slide TAPE EJECT** to open the Cassette Compartment Cover.

2 **Insert a cassette** record tab up, window side facing out.

3 **Press PUSH TO CLOSE mark** to close the Cassette Compartment Cover.

• **To remove the cassette...**
Slide TAPE EJECT to open the Cassette Compartment Cover and pull the cassette tape straight out.

Hint to locate recording position when inserting cassette

• When you insert a partially recorded cassette, use the Edit Search Function (see page 24) to visually confirm the point at which you want to start a new recording. Especially advisable when you want to add a recording to a tape that is already full.

Note

• If hand strap is tight it may prevent Cassette Compartment Cover from fully opening for tape insertion or ejection. Loosen hand strap if necessary.
• When inserting the cassette, make sure it faces in the right direction and then push in completely.

Using the Light (Optional)

To brighten the natural colors in a scene.

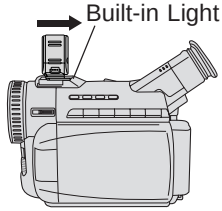

Note

• Using the light will reduce battery operating time.
• Be sure to provide adequate ventilation if using Light in a hot environment for an extended period.
• Be sure LIGHT is set to OFF when not in use.
• Do not attempt to lift or carry the Palmcorder by holding the Enhancement Light.
• If light bulb needs to be replaced, take Light to your nearest authorized servicenter.

Before you begin

• Connect the Palmcorder to a power source. (See pages 11, 12.)
• Set POWER to CAMERA or M-CARD.

1 **Slide Light into the Built-in Light Mount.**
Be sure it locks into place.

2 **Press LIGHT to turn ON or OFF.**

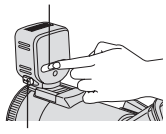

To remove the Light:
Press LIGHT RELEASE and slide the Light out of the mount.

Caution

This light becomes hot during operation. Make sure nothing covers the Light during operation.

Attaching the Shoulder Strap

1 **Undo the two strap ends** from their buckles.



2 **Remove the buckle from one end of the strap.**



3 **Thread the strap (with no buckle) through the Light Holder** so that it faces outward. Then, reinsert the buckle.



4 **Thread the strap ends through the Strap Attachment Rings.**

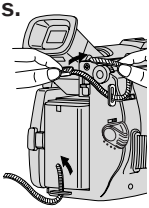

5 **Reinsert the strap ends through their buckles.**

- Make sure the straps are not twisted.

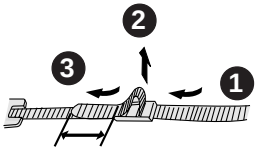

Adjust the Length

1 **Loosen the strap** from the Buckle and create a loop.

2 **Pull the strap firmly through the Buckle** to shorten or lengthen the strap.

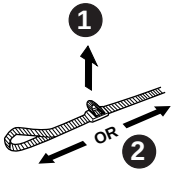

Hand Strap

Adjust the length of the Hand Strap to the size of your hand as illustrated.

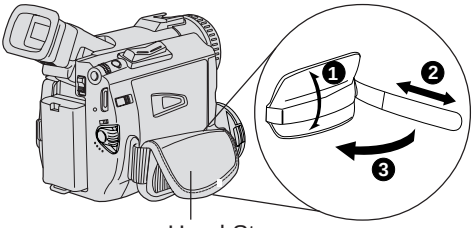

Attach the Light (Optional)

1 Insert the Light into the Light Holder for Storage.

2 **To remove the Light, press LIGHT RELEASE** and slide Light out of the holder.

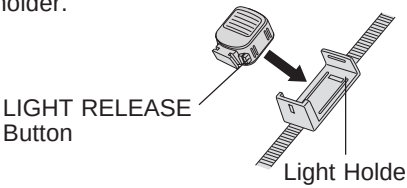

Lens Cap

Attaching the Lens Cap Cord to the Hand Strap

Remove the Hand Strap from the front clasp and thread the Strap through the loop in the Lens Cap Cord.
Reattach the Hand Strap.

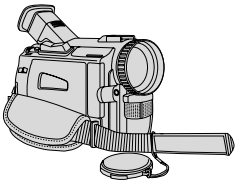

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Insert the Battery Pack

Before you begin
- Charge the Battery. (See page 11.)

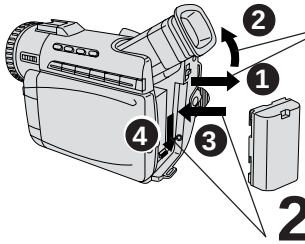

1 **Slide the Viewfinder backward** to its fully expanded position and then tilt it upward. (For model PV-DV201, **tilt Viewfinder upward**.)

2 **Insert the Battery Pack** and slide it down until it locks with a click.

Insert Cassette

1 **Set POWER Switch to VCR or CAMERA.**

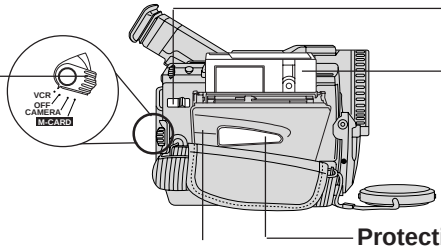

2 **Slide TAPE EJECT Switch** to open the Cassette Compartment Cover.

3 **Insert a cassette** record tab up, window side facing out.
- Make sure the record tab is closed. (See page 6.)

4 **Press PUSH TO CLOSE mark** to close the Cassette Compartment Cover.

Protection Film

Note
- Remove the Protection Film before use.

Camera Recording

When the LCD monitor is fully open, the Viewfinder automatically turns OFF.

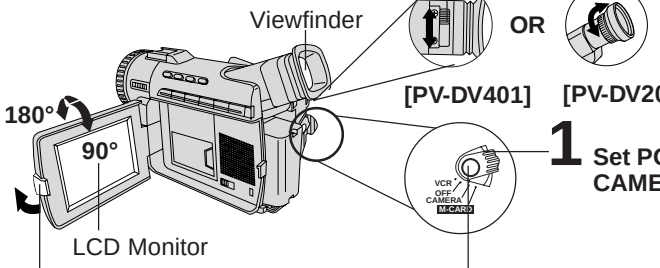

2 **Adjust the Vision Adjustment Control to your eyesight.**

1 **Set POWER Switch to CAMERA.**

3 **Press LCD-OPEN Button** to unlock the LCD monitor. **Swing it fully open and adjust the angle.**

4 **Press REC/PAUSE Button** to start recording.
Press REC/PAUSE Button again to pause recording.

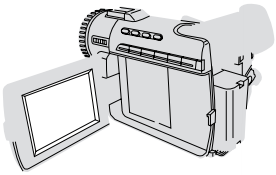

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com

Charge the Battery Pack on the AC Adaptor

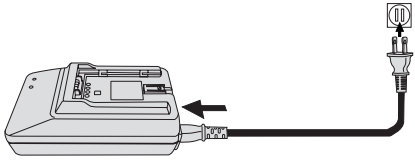

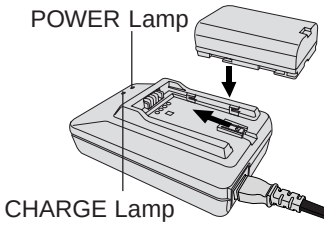

1 **Connect and plug in the Power Cord** as shown.
- POWER Lamp will light.
- Remove the DC Cable, if attached, from the adaptor.

2 **Attach the Battery as shown** to charge.
- CHARGE Lamp lights up. It goes out when charging is complete (approx. 1 hour). Expect approx. 1 hour 30 minutes of operation (EVF usage) when fully charged.

3 **Remove the Battery.**
Slide the Battery out and then lift up.

Note

About the Flashing of the CHARGE Lamp

- Charge the Battery within an ambient temperature range of 10 °C and 30 °C.
- If charging is done in extreme low or high temperatures, Battery charge time increases.

CHARGE Lamp flashes when...
- The Battery is being charged, but charging is taking longer than normal.
- Charging is not possible. Remove the Battery once, wait a short time, then re-attach it for charging.

Insert the Battery Pack

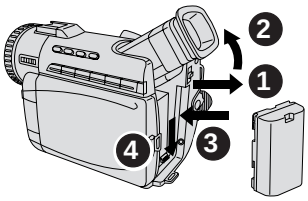

1 **Slide the Viewfinder backward** to its fully extended position and then tilt it upward. (For model PV-DV201, tilt Viewfinder upward.)

2 **Insert the Battery Pack** and slide it down until it locks with a click.

Remove the Battery Pack

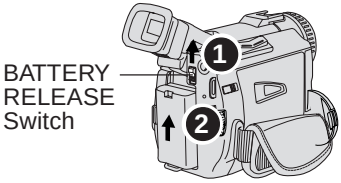

To remove the Battery Pack:
Slide the Battery upward while sliding the **BATTERY RELEASE Switch**.

Battery Care

Caution:
- Charge only with specified charger.
- Charge the Battery within an ambient temperature range of 32° F (0° C) and 104° F (40° C).
- The Battery may be warm after charging or just after use. This is normal.
- Do not use an insufficiently charged or worn out Battery.
- If charging is done in extreme low or high temperatures, Battery charge time increases.

Safety precautions:
- Do not get the Battery near, or dispose of in fire.
- Do not directly connect (short circuit) the positive (+) and negative (–) terminals.
- Never attempt to disassemble or reassemble the Battery.

To avoid damage to the Battery:
- Do not drop or jar the Battery.
- Use the Battery with specified models only.
- If the Battery is used in extremely high temperatures, a safety device will automatically prevent operation.

To insure longer battery life:
- **While not in use, remove Battery from the Palmcorder and AC Adaptor and store in a cool, dark, dry place.** If you leave the Battery in the Palmcorder or on the AC Adaptor, the Battery will no longer be rechargeable.
- Keep the Battery terminals clean.

Use AC Adaptor

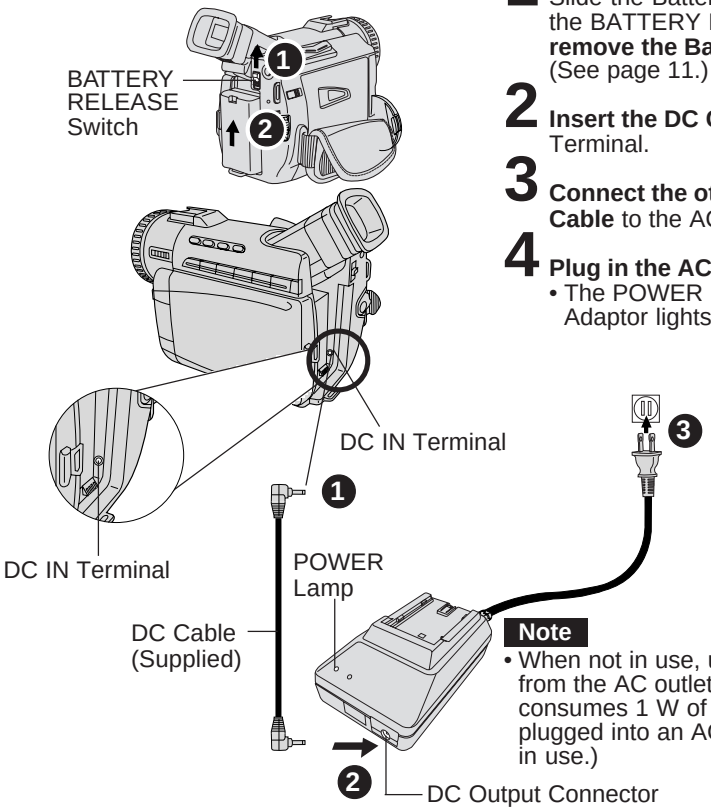

1 Slide the Battery upward while sliding the BATTERY RELEASE Switch to **remove the Battery Pack**. (See page 11.)

2 **Insert the DC Cable** into the DC IN Terminal.

3 **Connect the other end of the DC Cable** to the AC Adaptor as shown.

4 **Plug in the AC Adaptor.**
- The POWER Lamp on the AC Adaptor lights up.

Note
- When not in use, unplug the AC Adaptor from the AC outlet. (AC Adaptor consumes 1 W of electric power when plugged into an AC outlet even when not in use.)

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Set the Date and Time

The date and time is calculated, including leap year, up to DEC 31 2089.

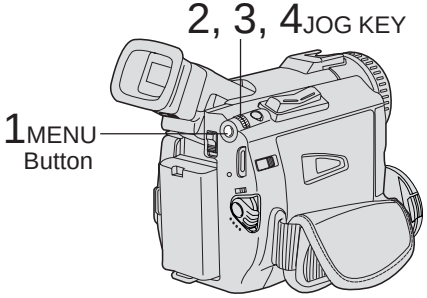

EXAMPLE:

YEAR : 2001

⬇ PUSH **Push**

MONTH : JAN

⬇ PUSH **Rotate**

MONTH : FEB

Note

- To make corrections, Press JOG KEY repeatedly to move back to an item and correct.
- A built-in Battery maintains clock operation. If the Palmcorder is not connected to a power source for a few months, the built-in battery may discharge and “CLOCK BATTERY” indication appears. (See page 21.)

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12).
- Set POWER to CAMERA or VCR.

1 **Press MENU** to display the Camera or VCR mode menu screen. (See page 14.)

[CAMERA MENU]

```
CAMERA MENU
1:D.FUNCTION
2:ADJUST
3:REC MODE
4:SET-UP
5:DISPLAY SETTING
6:LCD/EVF SETTING
7:PHOTO TITLE
•SELECT:ROTATE JOG KEY
•SET   :PUSH   JOG KEY
•EXIT  :PUSH   MENU KEY
```

[VCR MENU]

```
VCR MENU
1:PLAY FUNCTION
2:REC MODE
3:PLAY MODE
4:MULTI SETTING
5:DISPLAY SETTING
6:LCD/EVF SETTING
•SELECT:ROTATE JOG KEY
•SET   :PUSH   JOG KEY
•EXIT  :PUSH   MENU KEY
```

2 **Rotate JOG KEY** to select **DISPLAY SETTING**, and then **press JOG KEY** to display the DISPLAY SETTING menu screen.

3 **Rotate JOG KEY** to select **CLOCK-SET**, and then **press JOG KEY** to set to ON. (See pages 16, 18.)

- The DATE/TIME SETTING menu is displayed.

4 **Rotate JOG KEY** to select YEAR, then **press JOG KEY** to fix and move to the next item. Likewise, set the month, day, hour, and minutes.

```
DATE/TIME SETTING
YEAR  :2001
MONTH :OCT
DAY   :18
HOUR  :8PM
MINUTE:10
•SELECT:PUSH   JOG KEY
•SET   :ROTATE JOG KEY
•EXIT  :PUSH   MENU KEY
```

When DATE/TIME setting is completed, press MENU three times to start the clock and exit.

Using the Palmcorder Menu

The Palmcorder features two menu displays: one for CAMERA mode (recording) and the other for VCR mode (Playback). (See pages 15~18.)

- While the Menu screen is displayed, you cannot record on or play a tape.
- While recording, the Menu screen cannot be displayed.
- During playback, the Menu screen can be displayed.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to CAMERA or VCR.

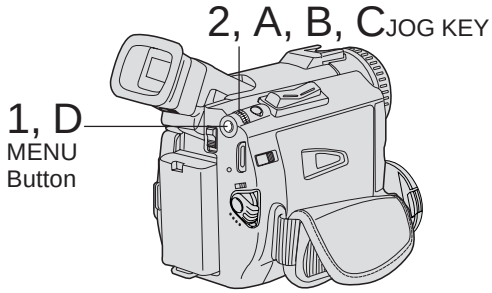

Displaying the MENU

1 **Press MENU** to display the CAMERA or VCR menu (according to the POWER setting).

2 **Rotate JOG KEY** to select a menu item.

Setting the MENU Items (EX. VCR Mode menu)

A **Press JOG KEY** to set your selection.

B **Rotate JOG KEY** to select a menu item.

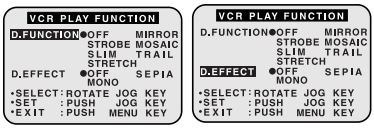

C **Press JOG KEY** to set your selection.
- The "●" mark indicates selection.

D **Press MENU** twice to exit the menu.

CAMERA Main menu

1 : D. FUNCTION
CAMERA FUNCTION menu is displayed. To select one of the 10 digital functions (MIRROR, STROBE, MOSAIC, SLIM, TRAIL, STRETCH, GAIN-UP, WIPE, MIX, PinP).

2 : ADJUST
CAMERA ADJUST menu is displayed. To select PROG. AE, W. BALANCE, or H.S.S. (High Speed Shutter).

3 : REC MODE
CAMERA REC-MODE menu is displayed. To select REC-SPEED, AUDIO-REC, INDEX, SHUTTER, SELF-REC, or WIND-CUT.

4 : SET-UP
CAMERA SET-UP menu is displayed. To select REMOTE, BEEP, or MAGICVU (PV-DV401 only).

5 : DISPLAY SETTING
DISPLAY SETTING menu is displayed. To select DISPLAY, C.RESET, DATE/TIME, or CLOCK-SET.

6 : LCD/EVF SETTING
LCD/EVF SETTING menu is displayed. To select LCD BRIGHTNESS, LCD COLOR or EVF BRIGHTNESS.

7 : PHOTO TITLE
PHOTO TITLE menu is displayed. To select TITLE or MODE.

VCR Main menu

1 : PLAY FUNCTION
VCR PLAY FUNCTION menu is displayed. To select D. FUNCTION or D.EFFECT.

2 : REC MODE
VCR REC MODE menu is displayed. To select REC-SPEED.

3 : PLAY MODE
VCR PLAY MODE menu is displayed. To select INDEX, AUDIO, REMOTE, or B.SEARCH.

4 : MULTI SETTING
MULTI SETTING menu is displayed. To select SPEED.

5 : DISPLAY SETTING
DISPLAY SETTING menu is displayed. To select DISPLAY, C.RESET, DATE/TIME, or CLOCK-SET.

6 : LCD/EVF SETTING
LCD/EVF SETTING menu is displayed. To select LCD BRIGHTNESS, LCD COLOR or EVF BRIGHTNESS.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Camera Mode Menu S

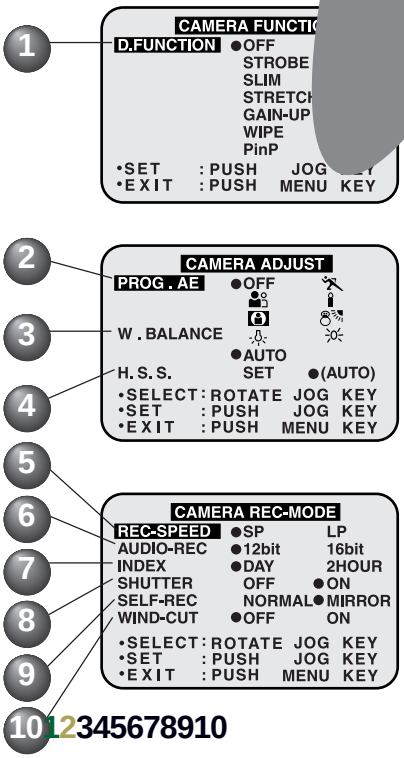

DIGITAL FUNCTION (See page 44.)
To select one of the 10 digital functions.
Setting to OFF cancels the previously selected digital function.

PROG. AE (See page 43.)
To select one of the 5 Program AE modes. Setting to OFF cancels the previously selected Program AE mode.

W.BALANCE (See page 42.)
To select one of the 3 White Balance modes.

H. S. S. (High Speed Shutter) (See page 48.)
To select a desired shutter speed.

REC-SPEED (See page 6.)
SP: Normal recording speed mode.
LP: Recording time is 1.5 times as long as in the SP mode. For example, 120 minutes of recording is possible on a 80 minute tape.

AUDIO-REC (See page 49.)
12 bit: The sound is recorded in the 12 bit/32 kHz mode.
16 bit: The sound is recorded in the 16 bit/48 kHz high-quality mode.

INDEX (See page 30.)
DAY: An index signal is recorded when recording is restarted after the date has changed since the last recording.
2 HOUR: An index signal is recorded when recording is restarted after a lapse of more than 2 hours.

SHUTTER (See page 41.)
When set to ON, still pictures taken in the PhotoShot mode are recorded with a visual shutter effect and click sound.

SELF-REC (See page 23.)
NORMAL: During self-recording, the picture on the LCD Monitor is the same as it will be recorded.
MIRROR: During self-recording, the picture on the LCD Monitor is horizontally reversed.

WIND-CUT (See page 22.)
To reduce sound distortion caused by wind hitting the microphone.
However, this slightly deteriorates the sound reproduction in the bass range.

VCR Mode Menu Screen

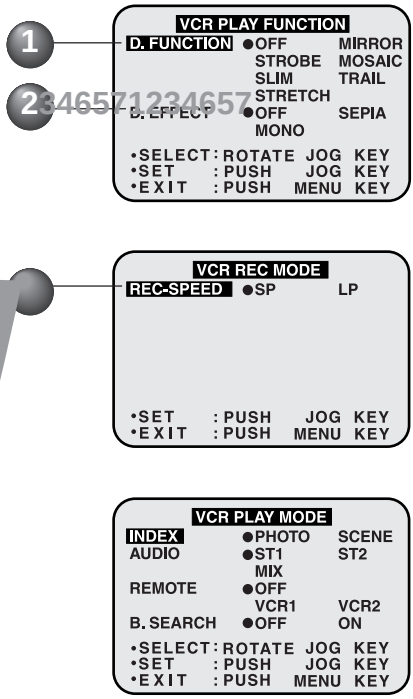

DIGITAL FUNCTION (See page 44.)
To select one of the 6 digital functions.
Setting to OFF cancels the previously selected digital function.

D. EFFECT (See page 44.)
To select one of the 2 digital picture effects for playback. Setting to OFF cancels the previously selected digital effect.

REC-SPEED (See page 6.)
SP: Normal recording speed mode.
LP: Recording time is 1.5 times as long as in the SP mode. For example, 120 minutes of recording is possible on an 80 minute tape.

INDEX (See page 30.)
To select the desired Index Search function.
PHOTO: To search for Photo shot pictures.
SCENE: To search for scenes marked with Index signal.

AUDIO (See page 50.)
To select the desired audio playback mode after performing audio dubbing in the 12 bit mode (SP mode only).
ST1 : The original sound alone is played back.
ST2 : The dubbed sound alone is played back.
MIX : The original sound and the dubbed sound are played back together.

REMOTE (See page 26.)
VCR1 : To receive signals from the Remote Control, set to VCR1.
VCR2 : To receive signals from the Remote Control, set to VCR2.
OFF : To prevent reception of signals from the Remote Control.

B.SEARCH (Blank Search)
(See page 25.)
Select ON to go directly to a blank portion of the tape.

Here are some of the basic indications which will appear on the Palmcorder EVF and LCD Monitor. Only Date and Time indications will be recorded onto the tape.

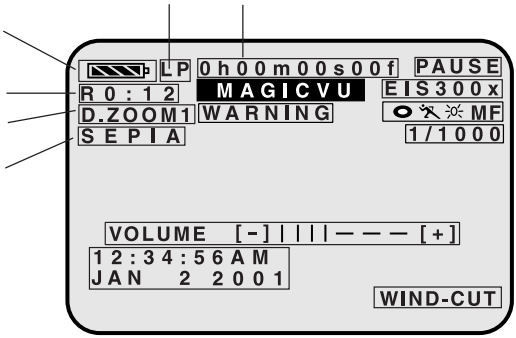

Battery Remaining

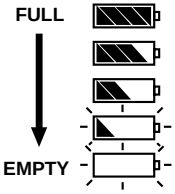

Tape Remaining

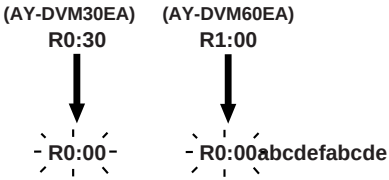

• It will take several seconds for the tape remaining indicator to operate after the tape starts moving.

Digital Zoom and other Digital Functions (See page 40.)
This display appears when the digital zoom function has been activated.

Playback Effect (See page 44.)
This display appears when SEPIA or MONO is selected in VCR menu.

Tape Speed Indication (See page 15.)
Indicates the tape speed (SP or LP).

Display ON/OFF and Counter/Time Code
The indication switches as shown below when the desired "DISPLAY" mode is selected from the menu. (See pages 16, 18.)

• When OFF is selected, all displays are turned off.

Linear Time Counter **Memory Counter**

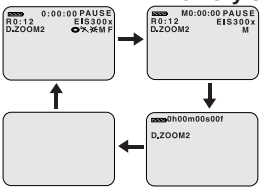

Time Code

Memory Counter M 0:00:00
The Palmcorder will stop whenever it reaches the point where the counter was previously set to M 0:00:00 during audio dub, fast forward, or rewind.

Time Code 0h00m00s00f
The Palmcorder calculates and displays exactly where you are on any tape in terms of hours, minutes, seconds, and frames (30 frames = 1 second).
• This display can not be reset.

IMPORTANT NOTE:
• Display must be set to ON for MF, AE, W.BALANCE or BACK LIGHT indications to be displayed on the EVF or LCD Panel when selected.
• C.RESET does not work when DISPLAY is set to OFF and T.CODE.

Electronic Viewfinder/LCD Monitor Indications

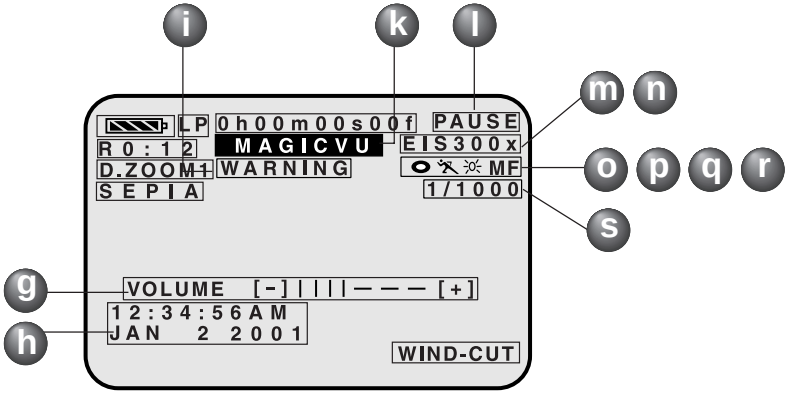

g **Volume Display** (See page 27.)
The volume bar appears when the volume of the built-in speaker is being adjusted.

h **Date and Time Indication**
(See pages 16, 18.)

As shown below, the date and time indication changes each time DATE/TIME is selected from the Palmcorder's MENU (see pages 16, 18) or the DATE/TIME Button is pressed on the remote (optional).

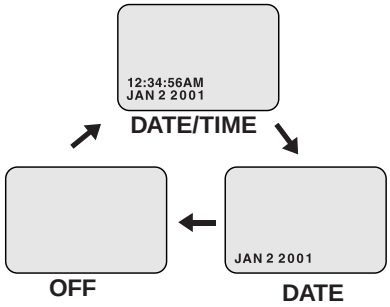

i **WARNING indication**
(See page 21.)
The warning displays appear in the EVF and the LCD monitor.

j **WIND-CUT indication**
(See page 15.)

MAGICVU (PV-DV401 only)
(See page 16.)
This display appears when MAGICVU is set to ON.

Tape Mode Indications

REC	Recording.
PHOTO	PhotoShot recording.
PAUSE	Paused during recording.
PLAY	Playback.
R ▷	Repeat Playback.
CHK	Recording Check.
FF	Fast forward.
REW	Rewind.
▷▷	FF Search.
◁◁	REW Search.
BLANK	Blank Search.
SEARCH	Index Search.

Digital EIS Indications
(See page 39.)

Zoom Magnification Level
(See page 40.)

Manual Focus Indication
(See page 47.)

White Balance Indication
(See page 42.)

PROGRAM-AE Indication
(See page 43.)

Backlight Indication
(See page 47.)

Shutter Mode indication
(See page 48.)

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

2e00eMl8ao

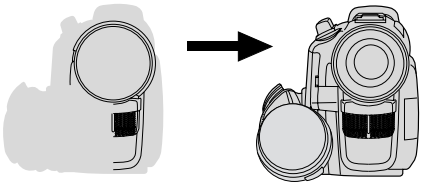

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com

Using the LCD Monitor

The LCD (Liquid Crystal Display) monitor can be used while recording.

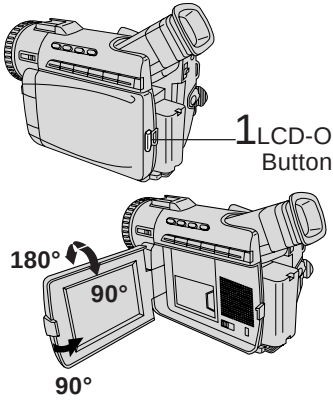

To adjust the LCD BRIGHTNESS or COLOR

A **Press MENU** to display the main menu screen.

B **Rotate JOG KEY** to select LCD/EVF SETTING from the main menu screen. (See pages 16, 18.)

C **Press JOG KEY** to display the LCD/EVF SETTING screen.

D **Press JOG KEY** to select LCD BRIGHTNESS or LCD COLOR, then **rotate JOG KEY** to adjust.

E **Press MENU** twice to exit this mode.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Insert a cassette with record tab closed. (See page 6.)

1 **Press LCD-OPEN** to unlock the LCD monitor.

2 **Swing the LCD monitor fully open and adjust the viewing angle.**

- The LCD monitor will automatically turn on.
- When the LCD monitor is completely closed, it will shut off automatically to save power.
- Adjust the LCD Brightness and/or color of the LCD monitor if necessary. Please refer to "To adjust the LCD BRIGHTNESS or COLOR" below.

3 **Start recording.** (See page 22.)

Note

- Using the LCD monitor will reduce battery operating time.
- Close the LCD monitor completely when not in use.

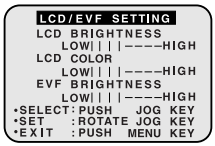

Self Recording

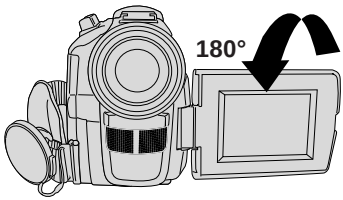

Rotate the LCD monitor 180 degrees so it faces the same direction as the lens to record yourself (CAMERA mode).
The picture in the LCD monitor will appear reversed.
Set SELF-REC to MIRROR (see page 15) in the Camera mode menu screen to see the picture as it is actually being recorded.

Blank Search

You can go directly to a blank portion of tape and start recording exactly where you left off.

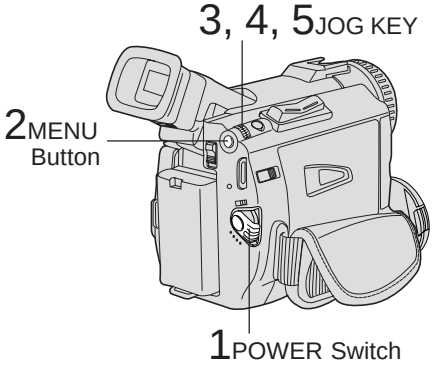

1 **Set the POWER to VCR.**
- The POWER Lamp lights red.
- Be sure POWER is fully turned to VCR position.

2 **Press MENU** to display the VCR mode menu screen.

3 **Rotate JOG KEY** to select PLAY MODE, then **press JOG KEY** to display the VCR PLAY MODE menu screen.

4 **Rotate JOG KEY** to select B.SEARCH in the VCR PLAY MODE menu. (See page 17.)

5 **Press JOG KEY** to select ON.
- "BLANK" will appear on the screen.

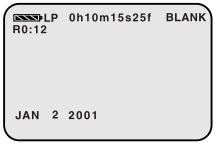

Remote Control (Optional, page 64)

You can operate the major functions of your Palmcorder from up to approximately 16 feet (5 m) away (indoors). Aim the IR Remote Control toward the front of the Palmcorder and press the desired buttons (Remote Sensor is located under the lens).

To operate Camera functions:

Set POWER to CAMERA.

To operate VCR functions:

Set POWER to VCR.

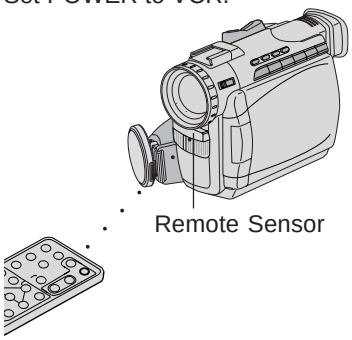

Controlled Functions

Rec/Pause (See page 22.)
Tele (Zoom) (See page 22.)
Wide (Zoom) (See page 22.)
Date/Time (See page 20.)
Reset (See page 50.)
PhotoShot (See page 41.)
Display On TV (See page 31.)
Counter/Time Code (See page 19.)
Audio Dubbing (See page 49.)
Record (See page 52.)
Menu (See page 14.)
Play (See page 27.)
FF/Search (See page 28.)
REW/Search (See page 28.)
Pause/Select (See pages 14, 28.)
Stop/Set (See pages 14, 27.)
Slow/Frame Advance (Forward) (See pages 28, 29.)
Slow/Frame Advance (Backward) (See pages 28, 29.)
Index Search (Forward) (See page 30.)
Index Search (Backward) (See page 30.)
Speaker Volume (See page 27.)

Remote Control (Optional)

Remote Controlling Two Palmcorders

You can control any two Panasonic Palmcorders with one Remote control (Optional, page 64). In order for the remote to distinguish between the two units, it is necessary to set one of the Palmcorders to VCR 2. On the remote, press VCR 1 or VCR 2 to control the desired Palmcorder.

Optional

For VCR 2 :
Press these buttons at the same time.

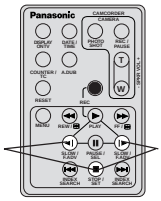

For VCR 1 :
Press these buttons at the same time.

Note

1 **Set the POWER to VCR or CAMERA.**
- The POWER Lamp lights red.
- Be sure POWER is fully turned to VCR or CAMERA position.

2 **Press MENU** to display the VCR or CAMERA mode menu screen.

3 **Rotate JOG KEY** to select CAMERA SET-UP in the CAMERA mode menu screen or VCR PLAY MODE in the VCR mode menu screen, then **press JOG KEY** to display the CAMERA SET-UP or VCR PLAY MODE menu screen.

4 **Rotate JOG KEY** to select REMOTE, and then press JOG KEY to select VCR 2. (See pages 16, 17). Leave the other Palmcorder set to VCR1.

5 **Set the Remote Control (Optional, page 64) to VCR 1 or VCR 2** to correspond with the Palmcorder you wish to control. (See above left.)

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Playback using the LCD Monitor

You can also use the LCD monitor to playback your recording.

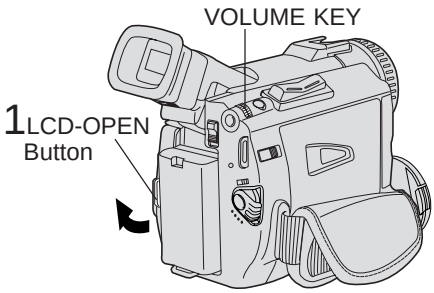

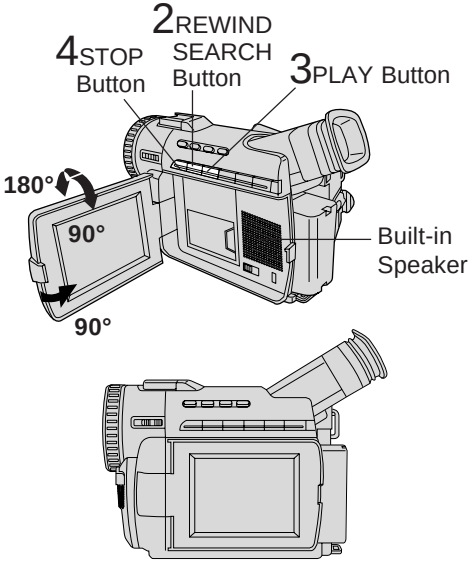

You can place the Palmcorder on a table, etc. for viewing. Rotate the LCD Monitor 180° and swing it up against the Palmcorder body as shown.

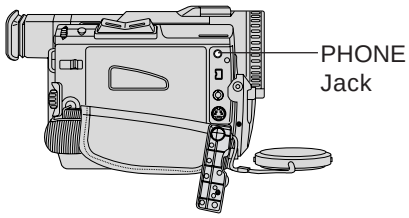

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Insert a recorded cassette.
- Set POWER to VCR.

1 **Press LCD-OPEN** to unlock the LCD monitor and swing open.

2 **Press REWIND/SEARCH** to rewind the tape.

3 **Press PLAY** to start playback.

To adjust the volume:

A **Hold down VOLUME KEY** until the volume setting screen appears. (See page 20).

B **Rotate VOLUME KEY** to adjust the volume of the built-in speaker. To remove the volume setting screen, **hold down VOLUME KEY** again.

- Adjust the picture on the LCD monitor if needed. (See page 23.)

4 **Press STOP** to stop playback**.**

- When the tape reaches its beginning during rewind or rewind search, it will stop automatically.
- If you press PLAY for more than 5 seconds, the Palmcorder will go into Repeat Playback mode when the tape reaches its end. The letter "R ▷" will appear in the EVF and LCD monitor. To exit the Repeat Playback mode, turn the Palmcorder OFF.

Note

- When a tape recorded in LP mode on another digital video camera is played back on this unit, the picture may appear mosaic.
- Using the LCD monitor reduces battery operating time.
- You can connect earphones (not supplied) to the PHONE Jack.

Special Effect Features During Playback

Note

• Sound is muted during all special effects.

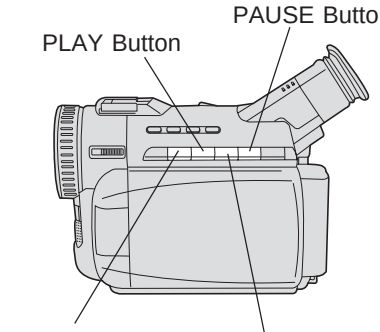

Optional

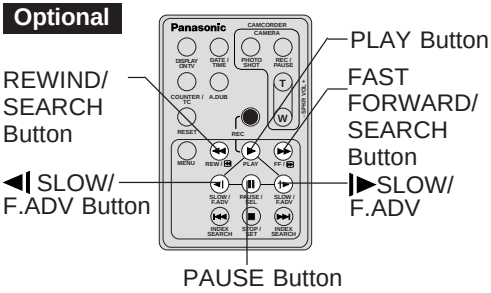

Fast Forward/Rewind Check

Monitor normal picture playback during fast forward or rewind.

- **Hold down FAST FORWARD/SEARCH** during fast forward.
- **Hold down REWIND/SEARCH** during rewind.
- The picture will appear for as long as the button is held down.

Rapid Visual Search

A During playback, **hold down FAST FORWARD/SEARCH** or **REWIND/ SEARCH.**
The search will continue for as long as the button is held down.

OR

B **Press FAST FORWARD/SEARCH or REWIND/SEARCH** once for a continuous rapid visual search. **Press PLAY** to release.

Note

• When executing a rapid visual search, the picture may become bluish for an instant or mosaic. This is normal during this mode.

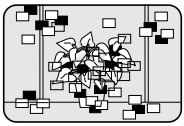

STILL Picture

Press PAUSE during playback.
Press PLAY or PAUSE to release.

Note

• To protect the tape and video heads, your Palmcorder's operating modes will revert as follows:
STILL ⟶ STOP (after 3 minutes.)

Slow Motion Playback

Optional Remote Control Only
(See page 64)

Forward Slow = **Press ❙▶ SLOW/F.ADV** during play.
Reverse Slow = **Press ◀❙ SLOW/F.ADV** during play.

Press PLAY to release. (During reverse slow motion playback, time code indication may not change regularly.)

Note

• Palmcorder will automatically STOP when in slow motion for more than 10 minutes.
• During slow motion playback, picture may move up and down. This is normal.
• When you start or stop slow motion playback, the picture may become bluish for an instant.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Special Effect Features During Playback (Continued)

Note

• Sound is muted during all special effects.

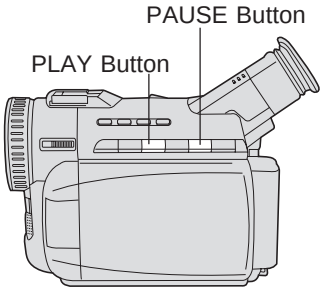

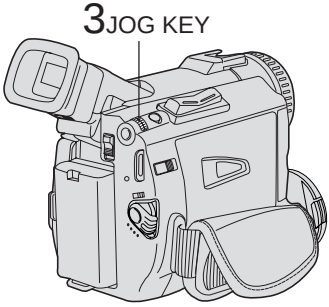

Optional

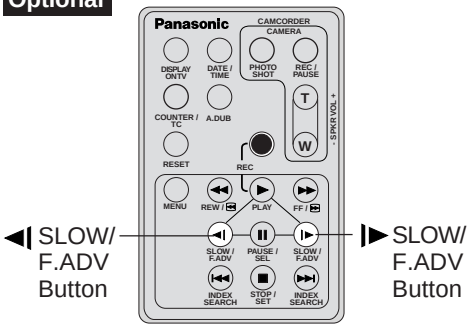

Variable Speed Search

1 **Press PLAY** to start playback.

2 **Press PLAY again.**

3 **Rotate JOG KEY** to adjust the playback speed.

- Rotate JOG KEY downward for forward playback.
- Rotate JOG KEY upward for reverse playback.

To return to normal playback:
Press PLAY. Playback will continue at normal speed.

Note

- The Variable Speed Search function offers a choice of six playback speeds (1/5X, 1X, 2X, 5X, 10X, 20X) both in forward and reverse directions.
- The review playback at the 1X speed is playback in reverse direction.
- During the Variable Speed Search (at a speed other than 1X), mosaic-like patterns will appear in the picture.
- During the Variable Speed Search, sound is muted.

Jog Frame by Frame Search

(Palmcorder only)

During Still mode, **rotate JOG KEY** to advance or reverse the picture one frame at a time.

Frame by Frame Advance

Optional Remote Control Only
(See page 64)

Press PAUSE during playback.

Press |▶ SLOW/F.ADV to do a frame by frame advance.
Press ◀| SLOW/F.ADV to do a frame by frame reverse.

Press PLAY to release.

Note

- If you hold down SLOW/F.ADV, you can see a continuous series of still images at a slower speed than normal slow mode.
- During frame by frame advance, a few frames may move automatically, and the picture may become bluish for an instant.

Special Effect Features During Playback (Continued)

Note

- Sound is muted during all special effects.

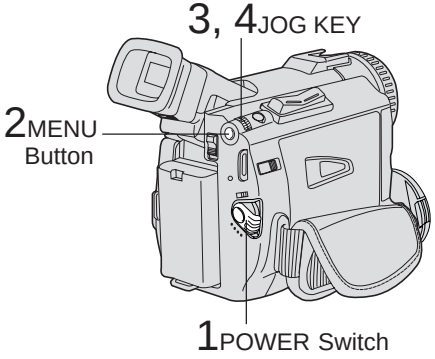

Optional

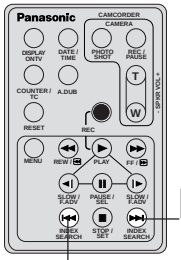

Top Scan

If you hold down INDEX SEARCH more than 2 seconds, the Palmcorder will scan for scenes (or PhotoShots) and playback the first few seconds of each.

To cancel this function, press PLAY or STOP.

Note

- Search will not work if there is a succession of PhotoShots.

Index Forward/Reverse Search

Optional Remote Control Only
(See page 64)

Search for a particular scene by using the electronic index marks placed at the beginning of each recording.

1 **Set the POWER to VCR.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.

2 **Press MENU** to display the VCR mode menu screen.

3 **Rotate JOG KEY** to select **PLAY MODE**, then **press JOG KEY** to display the VCR PLAY MODE menu screen.

4 **Rotate JOG KEY** to select **INDEX**, and then **press JOG KEY** to select PHOTO or SCENE. (See page 17.)

A **Place the Palmcorder in the VCR STOP mode.**

B **Press INDEX SEARCH fast forward or rewind** the number of recordings (indexes) forward or back you want to view. The Palmcorder will advance or rewind to the desired recording and automatically start playback.

- The number of times you pressed the button is displayed in the EVF and the LCD monitor if you set INDEX on the VCR menu to SCENE. (See page 17.) (Ex., if you press the button three times, “S3” will appear.)
- If the interval between scenes is less than 1 minute, index search may not operate properly.
- Response time from pressing the button and change in the scene number is quite slow. Do not press INDEX SEARCH rapidly and continuously.
- During Reverse Index Search mode, playback will not begin when a tape rewinds all the way to the beginning.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

View Recording/Playback on your TV

[TV with AUDIO/VIDEO IN Jacks]

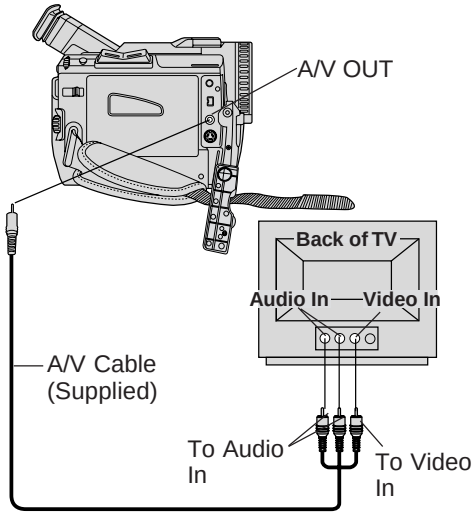

[TV with S-VIDEO IN Jacks]

For best Chrominance and Luminance, use the S-Video connection if available on your TV.

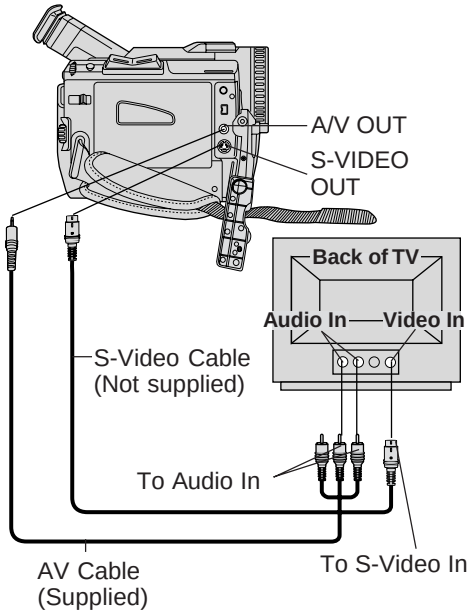

1 Set POWER to CAMERA or VCR.
To view what the Palmcorder is recording or to playback a tape on your TV.

2 Turn your TV ON and set it to LINE INPUT or S-VIDEO.
Check your TV operating instructions for further information.

3 Start playback or begin a recording.

Note

- Make sure the Palmcorder and TV are turned off while connecting.
- Please connect the A/V Cable securely.

Optional Remote Control Only
(See page 64)

You can display the various EVF and LCD indications on your TV by pressing DISPLAY ON TV on remote control. Press again to remove the indications.

DISPLAY ON TV Button

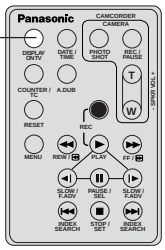

Optional

CATV System Installer
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

rom a
Card.

1 **Repeat steps 1 and 2 on page 32.**

2 **Set POWER to VCR.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.

3 **Press PLAY** to start playback of the cassette tape. And then, **press PAUSE** to select an image.

4 **Press PHOTOSHOT** to record the desired image to the Memory Card.

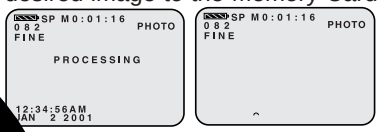

When PHOTOSHOT is pressed in PLAY or SLOW mode, the screen goes to STOP mode.
To playback the images of the Memory Card, see pages 33~34.
- When Variable Speed Search is done (see page 29), this feature can not be used.

5 **Repeat steps 3~4** to record another image to the Memory Card.

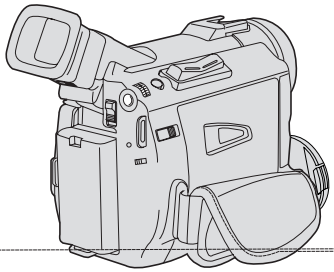

2 **Press M-PLAY** to display the Multi playback screen.
- "PLEASE WAIT" appears on-screen.
- Rotate JOG KEY to scroll through Multi image screen pages (6 images per page) and select an image.
- The selected image is underlined in green.

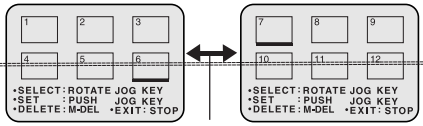

"PLEASE WAIT" is displayed.

- Press MENU to display CARD SETTING menu screen.
- Press M-STOP to return to the Card PhotoShot REC Mode. (See page 32.)

3 **Press JOG KEY** to display the selected image as a full-size screen.
- "PLEASE WAIT" appears on-screen.

4 **Rotate JOG KEY** to select **BACK** (previous image), **MULTI** (Multi Image screen), or **NEXT** (next image).

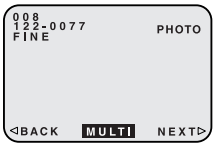

- **Press M-STOP** to return to the Multi Playback screen.

DISPLAY : Select OFF to remove all displays from the screen.

DCF (Design rule for Camera File system)
: Select OFF to cancel DCF No. on the screen.

Note
- If the file number is changed, the Palmcorder cannot read the file data.
- This product is compliant with DCF (Design rule for Camera File System). Images saved on the Memory Card using other Digital Still Cameras that are compliant with DCF can be viewed on this product.

Warning
- While "PLEASE WAIT" is displayed, **DO NOT turn off the Palmcorder or unplug the AC Adaptor (supplied)** because this will cause irreversible damage to the memory.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Delete Specific Images

You can delete unwanted images and increase the remaining image memory.
Warning:
Once deleted, images cannot be restored.

DELETE PAGE
Delete specific images from a page.
DELETE ALL
Delete all images. (See page 36.)
FORMAT
Delete all data. (See page 37.)

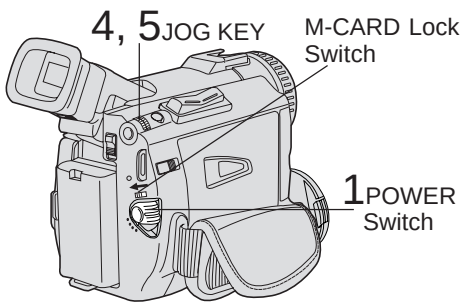

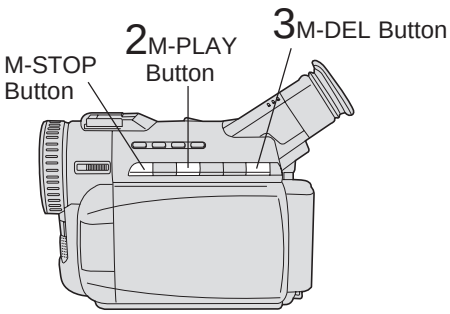

Warning

- While deleting image, **DO NOT turn off the Palmcorder or unplug the AC Adaptor (supplied)** because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)

1 **Slide the M-CARD Lock Switch to unlock, then set POWER to M-CARD.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to M-CARD position.
- "PLAY: PUSH PLAY KEY" is displayed for 10 seconds.

2 **Press M-PLAY** to display the Multi playback screen.
- "PLEASE WAIT" appears on-screen.

3 **Press M-DEL** to display the DELETE menu, then **rotate and press JOG KEY** to select PAGE.

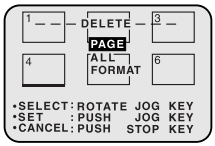

- DELETE PAGE menu is displayed.

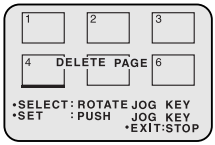

4 **Rotate and press JOG KEY** to select and set the image to be deleted.
- The selected image is underlined in pink.

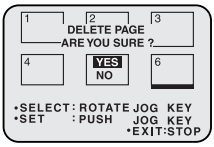

5 **Rotate JOG KEY** to select YES, and **press JOG KEY** to delete the selected image.
- To cancel delete, press M-STOP or rotate and press JOG KEY to select NO.
- "PLEASE WAIT" appears on-screen.
- To delete other images, repeat steps **4**~**5**.

Delete All Image Pages

You can delete all images from the Memory Card easily with this operation.
Warning:
Once deleted, images cannot be restored.

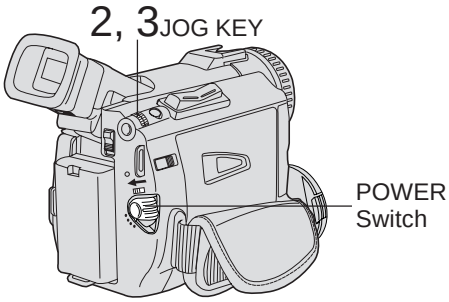

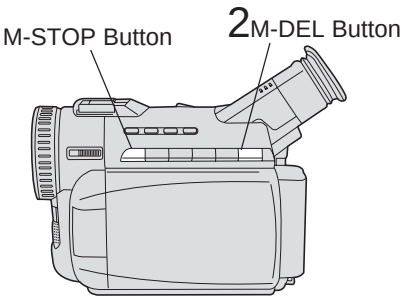

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)

1 **Do steps 1 and 2 on page 35.**

2 **Press M-DEL** to display the DELETE menu. Then, **rotate and press JOG KEY** to select ALL.

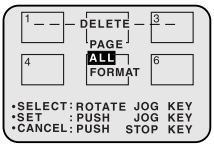

- The screen below is displayed.
- To cancel delete, press M-STOP or rotate and press JOG KEY to select NO.

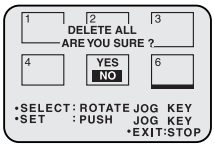

3 **Rotate and press JOG KEY** to select YES.

- "PLEASE WAIT" is displayed on the screen, and then "NO PICTURE" is displayed.

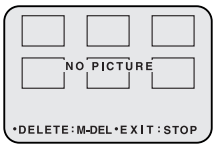

- Press M-STOP to return to the Card PhotoShot REC Mode screen. (See page 32.)

Warning

- While deleting image, **DO NOT turn off the Palmcorder or unplug the AC Adaptor (supplied)** because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Format the Memory Card

You can easily format your Memory Card using this operation.

Warning:
Formatting permanently removes all image data.

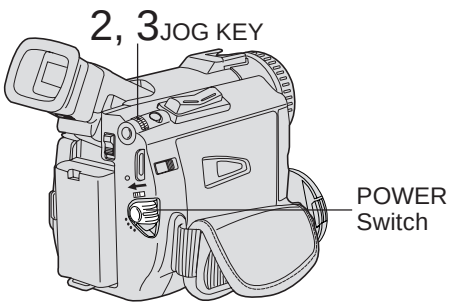

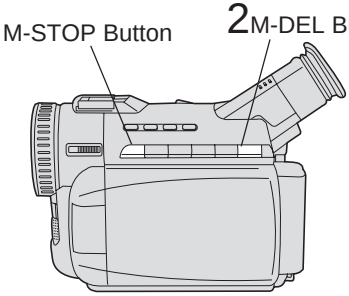

Warning

- While deleting image, **DO NOT turn off the Palmcorder or unplug the AC Adaptor (supplied)** because this will cause irreversible damage to the memory, resulting in reduced image storage capacity.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)

1 **Do steps 1 and 2 on page 35.**

2 **Press M-DEL** to display the DELETE menu, then **rotate and press JOG KEY** to select FORMAT .

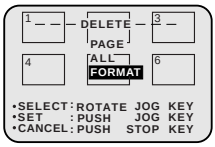

- The screen below is displayed.
- To cancel format, press M-STOP or rotate and press JOG KEY to select NO.

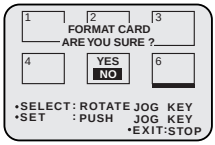

3 **Rotate and press JOG KEY** to select YES .

- "PLEASE WAIT" is displayed on the screen as all image data is deleted from Memory Card. Deletion is complete when "NO PICTURE" is displayed.

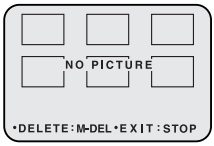

- Press M-STOP to return to the Card PhotoShot REC Mode screen. (See page 32).

ot images from a
ette to be used as

to ON, the
le will appear
is made.

e is replaced with the
in a wiping motion.

1 **Set POWER to CAMERA.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 **Press MENU** to display the CAMERA menu screen. Then **rotate and press JOG KEY** to select **PHOTO TITLE**.

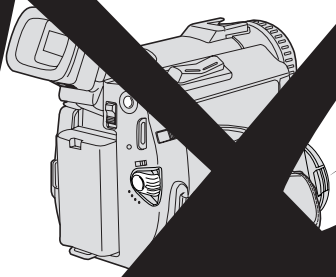

4 **Rotate and press JOG KEY** to select and set an image.
"PLEASE WAIT" is displayed while image is processed. Then, "PHOTO TITLE SET" is displayed for approx. 3 seconds, and the screen goes back to the Camera mode screen.
- After Photo Title is performed, Digital Function turns off.

There are 12 pre-installed files.

5 **Press REC/PAUSE** to start recording with Photo Title.
- WIPE or MIX screen is displayed at beginning of the recording. Then the Photo Title setting will be cleared automatically.

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com

Digital Zoom

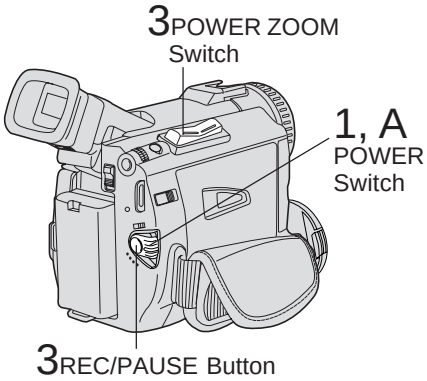

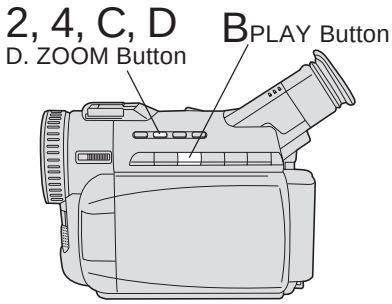

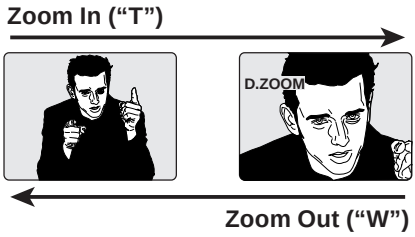

Note

- Other Digital Functions are turned off automatically when the EIS and Digital Zoom are selected.

CAMERA mode

1 **Set POWER to CAMERA.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 **Press D. ZOOM** to select D.ZOOM1 or D.ZOOM2.
once : D.ZOOM1 (from 20X to 40X)
twice : D.ZOOM2 (from 20X to 300X)
three times : Turn off D.ZOOM

3 **Press REC/PAUSE** to start recording and press **POWER ZOOM** to zoom in or zoom out.
- The magnification level is always displayed in the EVF or the LCD monitor when DISPLAY is set to ON. (See pages 16, 18.)

4 **Press D.ZOOM** to turn off Digital Zoom so that no indication appears.

Note

- The normal optical zoom functions from 1X to 20X.
- Because the image is enlarged digitally, the picture may become distorted when higher magnification levels are used.
- When the level falls below 20X, the normal zooming function will resume.
- Focus distance becomes 4 feet (1.2 m) if the lens is in full telephoto.

VCR mode

A **Set POWER to VCR.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.

B **Press PLAY** to start playback.

C **Press D.ZOOM**.
- The center portion of the image doubles in size.

D **Press D.ZOOM** again for normal image size.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

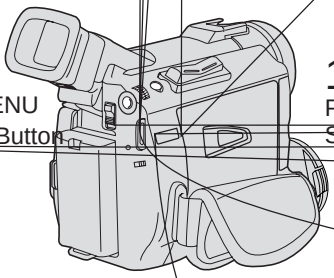

B MENU Button

1, A POWER Switch

Optional Remote Control Only
(See page 64)

Optional

E INDEX SEARCH (rewind Button)

Note

White Balance

Auto White Balance automatically maintains optimum color balance in most lighting conditions. However, when using Digital Functions, etc., you may get better results using the manual adjustment.

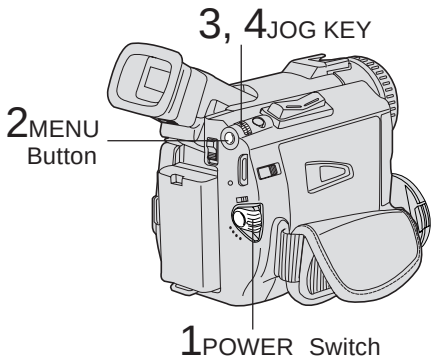

1 Set POWER to CAMERA.
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 Press MENU to display the menu screen.

3 Rotate JOG KEY to select **ADJUST**, and then **press JOG KEY** to display the CAMERA ADJUST menu screen.

4 Rotate JOG KEY to select **W.BALANCE** , and then **press JOG KEY repeatedly** to select AUTO, Indoor halogen lamp "-☼-", or Outdoors "☼".

-☼- : When the source illumination is a halogen lamp.

☼ : When shooting outdoors on a sunny day.

AUTO : Automatically maintains optimum color balance in most lighting conditions.

Recording Still Pictures

You can record still pictures of any desired duration together with sound.

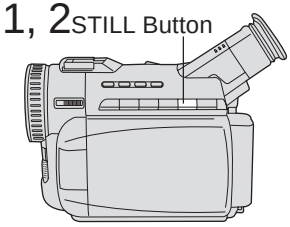

1 While in RECORD mode, **press STILL and hold for 2 seconds** to capture a still picture. The captured still picture will be recorded together with sound.

2 Press STILL once again to release the still picture. The camera will resume recording real-time pictures.

MAGICVU/0LUX (PV-DV401 only)

MAGICVU allows you to record subjects in comparatively dark places.

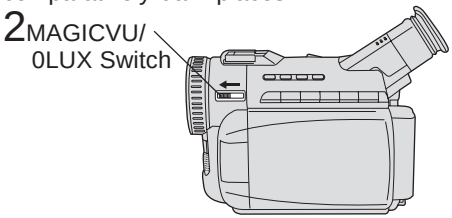

1 Set POWER to CAMERA.
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 Slide MAGICVU/0LUX to ON.
- A black and white image appears.
- You can select the color of image: B/W, green, or blue. (See page 16.)
- To cancel this feature, slide MAGICVU/0LUX to OFF.

Note
- The subject can be up to 3 m (9 feet) away.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

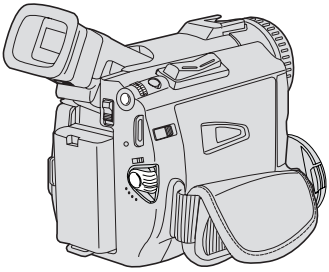

SPORTS mode

- The recorded images will not be so blurred when they are viewed later using slow or still picture playback.
- When playing back a sports mode recording, the movement may appear slightly jerky.
- Do not use this mode when recording under fluorescent, mercury, or sodium lighting. These types of lights will affect the color and brightness of the images.
- A vertical band of light might appear when recording objects that are brightly illuminated or which are highly reflective.
- If the amount of light is insufficient, the SPORTS “

Other Digital Functions

Use the following features to add interest and professionalism to your recordings or playback. Select from eleven special effects.

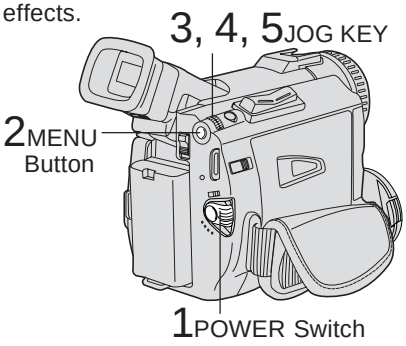

Types of Digital Functions

MIRROR
Symmetrical image from the current camera picture.

STROBE
The recording appears as a sequence of still frames.

MOSAIC
The picture appears in a mosaic pattern.

SLIM
The picture is expanded vertically.

TRAIL
The subject being recorded creates a trail when in motion.

STRETCH
The picture is expanded horizontally.

GAIN UP (Not available during playback)
Picture sensitivity is increased.
• Only Manual Focus is available.

WIPE
Successive scenes are separated in a way which simulates the drawing of a curtain.

MIX
The current scene is mixed in with the following scene during scene changes.

PinP
PinP (Still image) is displayed on the Main Picture.

SEPIA (Only available during playback)
The picture is played back in sepia, a brownish color, giving it an antique look.

MONO (Monotone) (Only available during playback)
The picture is played back in black-and-white.

1 **Set POWER to CAMERA or VCR.**
• The POWER lamp lights red.
• Be sure POWER is fully turned to CAMERA or VCR position.

2 **Press MENU** to display the menu screen.

3 **Rotate JOG KEY** to select **D.FUNCTION** in the CAMERA mode menu screen or **PLAY FUNCTION** in the VCR mode menu screen, then press **JOG KEY** to display the CAMERA FUNCTION or VCR PLAY FUNCTION menu screen.

4 **Rotate JOG KEY** to select **D.FUNCTION**, and then **press JOG KEY repeatedly** to select one of the Digital Functions listed on the left.

5 To cancel the Digital Function, **press JOG KEY repeatedly** to select OFF.

Note

• **The EIS and Digital Zoom features are turned off automatically when one of the Digital Functions listed at left is selected.**

To use the WIPE function

a. In Camera mode, set the “D.FUNCTION” item in the main menu screen to “WIPE”. (See page 15.)
b. Press REC/PAUSE to start recording.
c. Press REC/PAUSE to pause the recording. The last scene will be memorized.
d. Press RECORD/PAUSE to start recording again. The new scene will take the place of the memorized scene.

To use the MIX function

a. In Camera mode, set the “D.FUNCTION” item in the main menu screen to “MIX” (see page 15). Then, perform steps b-d above.

The memorized scene and the new scene will appear mixed as the scene changes from one to the other.

Note

• When Photo Title is set, WIPE/MIX mode becomes Photo Title. When Photo Title is finished, Digital Function turns OFF.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Picture in Picture (PinP)

You can display a PinP (still image) screen on the Main Picture.

Note

- PinP position is fixed at the bottom right of the screen.

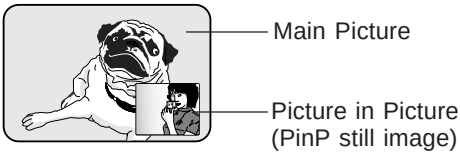

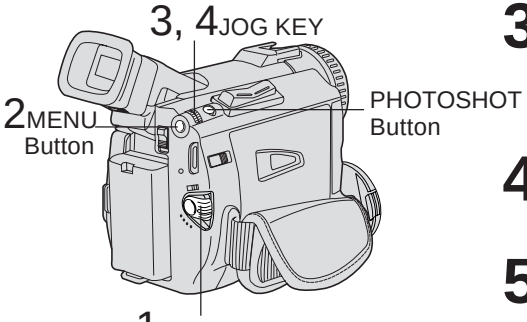

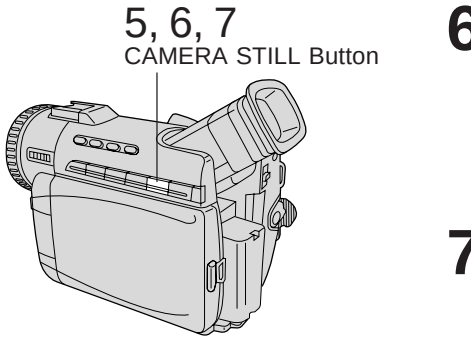

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)

1 **Set POWER to CAMERA.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 **Press MENU** to display the menu screen.

3 **Rotate JOG KEY repeatedly** to select D.FUNCTION , then **press JOG KEY** to display the CAMERA FUNCTION menu screen.

4 **Press JOG KEY** to select PinP .
- **Press MENU twice** to exit this menu.

5 Aim at the scene you wish to place as PinP, then **press CAMERA STILL** to freeze the image.

6 **Press CAMERA STILL again** to place the frozen image as PinP.

7 **Press REC/PAUSE** to record a scene with PinP image.
- **Press PHOTOSHOT** to record a scene with PinP image in PhotoShot mode.
- **Press CAMERA STILL again** to remove PinP image.

Strobe Multi Mode

In Strobe Multi Mode, you can select the rate at which a succession of still screens are captured from the playback picture.

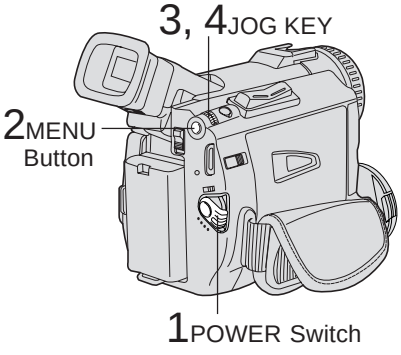

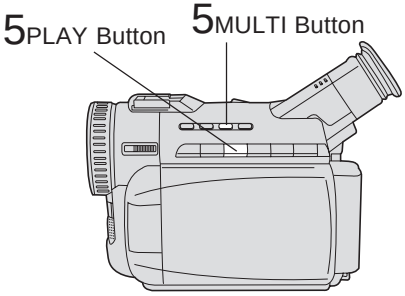

Note

- A Multi Image Playback screen cannot be output from the DV terminal or Digital Still Image terminal.
- A Multi screen will have slightly lower image quality.

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)

1 **Set POWER to VCR.**
- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.

2 **Press MENU** to display the menu screen.

3 **Rotate and press JOG KEY** to select and set **MULTI SETTING**.

4 **Press JOG KEY** to select **SPEED**, then press repeatedly to set desired speed.

Strobe Speeds

Strobe Speeds	9 screen capture time
FAST	Every 0.3 seconds
NORM	Every 0.6 seconds
SLOW	Every 1.0 seconds

- **Press MENU twice** to exit.

5 **Press PLAY** to start playback. **Press MULTI** at the point you want to start capturing.
- A succession of 9 screens will be captured, and playback will stop.

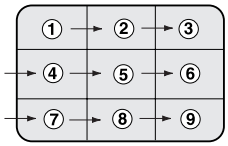

- **Press MULTI** to return to the normal STILL screen.
  Press PLAY to start playback.
  Press STOP to stop playback.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Auto Focus

The Palmcorder automatically adjusts the focus over the entire zoom range.

Manual Focus

Use Manual Focus (MF) when recording ...

- a subject through glass.
- a scene where the subject is far from the Palmcorder and there are objects in the foreground.
- a subject with distinct horizontal stripes.
- a subject not centered in the Viewfinder.
- subjects with shiny surfaces.
- an obliquely angled subject.
- a bright, flat subject such as a white wall.
- in low light situations.
- a scene with fast motions, like a golf swing. **Re-focusing may be required**
- when your Palmcorder is aimed at a new scene.

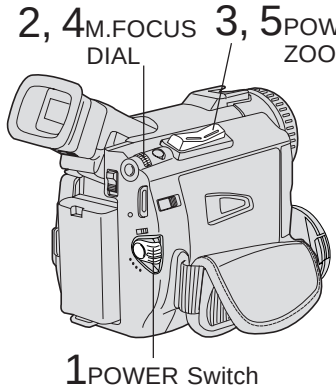

1 Set POWER to CAMERA.
- The POWER lamp lights red.
- Be sure POWER is fully turned to CAMERA position.

2 Press M.FOCUS DIAL so that "MF" (Manual Focus) appears in the EVF or the LCD monitor.

3 Press and hold POWER ZOOM "T" side (Telephoto) until the lens is at maximum zoom in.

4 Turn M.FOCUS DIAL until the picture is in focus.
- It may be necessary to back away from the subject to focus the image properly.

5 Press POWER ZOOM to "W" or "T" as desired.
- The subject will remain in focus over the entire zooming range.
- It may be necessary to back away from the subject to focus the image properly.

Note

- DISPLAY must be set to on for MF, AE, W.BALANCE, or BACK LIGHT to be displayed on the LCD or EVF.

Macro Focus (for close-ups)

Press the "W" side of POWER ZOOM to the maximum wide angle position.
Auto Focus will function with the subject as close as 1 inch (25 mm) in front of the lens.

Backlight

Use when recording a subject that is darker than the surrounding scene, in a shadowed area, or when the light source is in back of your subject.

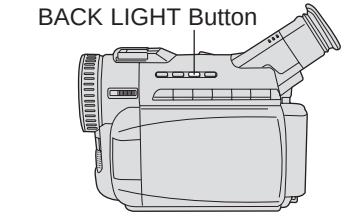

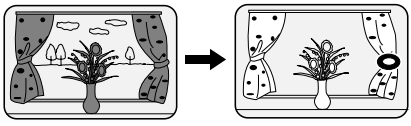

EVF or LCD monitor indication.

Press BACK LIGHT in Record mode to activate the Backlight feature.

The Indicator "⭘" will appear in the EVF or LCD monitor.

Press BACK LIGHT again to cancel the Backlight feature.

Note

- The Indicator "⭘" will not appear in the EVF or LCD monitor when OFF is selected in the DISPLAY menu.

Special Features

High Speed Shutter

To record high sp motion (e.g. tennis stroke) for improv TILL or SLOW MOTION playbac n watching the tape on this Palmcorde

Before you begin

- Connect the Palmcorder to a power source. (See pages 11, 12.)
- Set POWER Switch to CAMERA.
- Insert a cassette with record tab. (See page 6.)

Auto Shutte

In the AUTO mode ndication in the EVF and LCD monitor), the Palmcorder will automatically adjus shutter speed (up to 1/350).

• AUTO mode is a tically selected whenever the POWER Switch is set to CAMERA.

Manual Selec

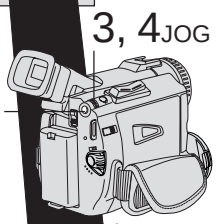

1 **Press MENU** to display the Camera mode menu in the EVF or the LCD monitor.

2 **Rotate and press JOG KEY** to select **ADJUST**, **then rotate and press JOG KEY** to select **H.S.S.**.

3 **Press JOG KEY** to select **SET**.

• SHUTTER SPEED menu is displayed.



4 **Rotate JOG KEY** to choose one of the following shutter speeds.

1/100 ↔ 1/60 ↔ AUTO ↔ 1/8000 ↔ 1/4000
↕
1/250 ↔ 1/500 ↔ 1/1000 ↔ 1/2000

• Press MENU three times to exit.

Note

- For proper color reproc t is recommended that you use this featur rs. For indoor High Speed Shutter rec additional halogen or tungsten lig be provided. Fluorescent light will de e picture quality.
- This feature requires ar t. More light is required for the fastest s peeds.
- The Auto Focus system operate properly in insufficient li using the High Speed Shutter.
- When PROG.AE is ON, ot manually select the shutter speed.
- When MAGICVU is ON, AE and H.S.S. cannot be set in th

Audio/Video Fade In/Out

You can make smoothe transitions for a more professional

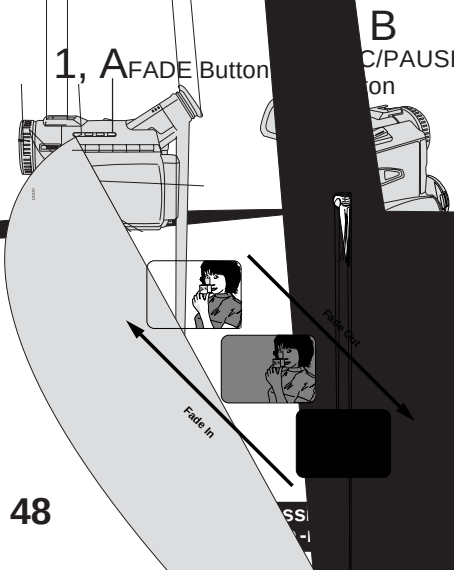

Fade In

Starting the first scene with “fade in” is very effective.

1 **In REC/PAUSE mode, hold down FADE** until the picture fades out.

2 **Press REC/PAUSE** to start recording.

3 **Release FADE** and the picture will gradually fade in.

Fade Out

Audio Dubbing using the External or Built-in Microphone

The original sound can be replaced with new sound using the built-in Palmcorder microphone or an external microphone (PV-DV401 only).

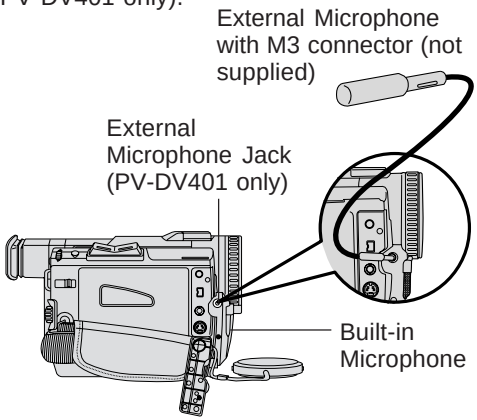

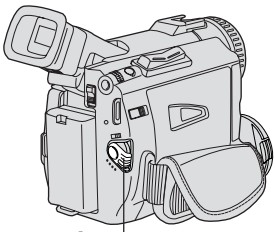

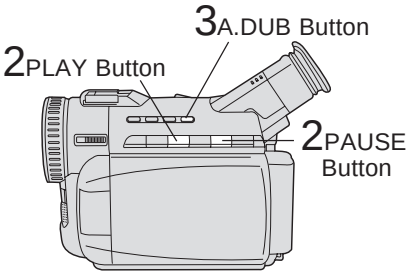

Optional

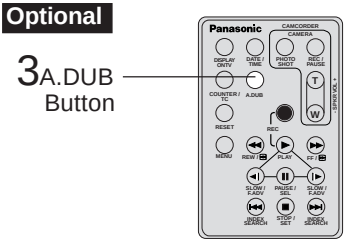

Before you begin

- Connect the external Microphone (if used) (PV-DV401 only).
- Turn on the Palmcorder.
- Insert a pre-recorded tape to be dubbed.

The AUDIO-REC setting in CAMERA MENU mode should be as follows:

12 bit	The original sound is recorded on ST (Stereo) 1, and the new sound will be recorded on ST (Stereo) 2.
16 bit	The original sound is replaced with the new sound.

- Select 12 bit if you do not want the original sound to be completely replaced during an audio dub.
- If you dub over a tape which has both 12 bit and 16 bit audio recordings on it, keep in mind that the original 16 bit audio portion will be completely replaced.

1 Set POWER to VCR.
- The POWER lamp lights red.
- Be sure POWER is fully turned to VCR position.
- If you have the Optional Remote Control, you can set the Palmcorder to stop automatically at a specified point on the tape. See “Memory-Stop Editing” on page 50.

2 Press PLAY.
Then press PAUSE where you want dubbing to begin.

3 Press A.DUB on this unit (for 3 seconds) or on the remote control (optional, page 64) to put the Palmcorder in the Audio Dub mode.
- “A.DUB” flashes in the EVF or the LCD monitor.

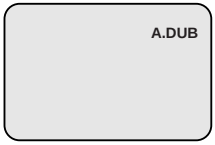

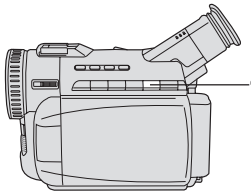

To listen to the desired audio sound, set the AUDIO setting of the VCR mode MENU (see page 17) as follows:

AUDIO: The following selections are available for 12 bit AUDIO dubbed recordings only (sound recorded in SP mode only).

ST 1	Set this position to listen to the original sound.
ST 2	Set this position to listen to the audio dubbed sound.
MIX	Set this position to listen to both the original sound and the audio dubbed sound.

Note

- 16 bit dubbed sound completely erases the original 16 bit recorded sound.
- If you dubbed using 12 bit AUDIO recording and then selected AUDIO-MIX in the menu for playback, the sound will be stereo regardless of the AUDIO-OUT setting.
- If you recorded in LP mode, you cannot use the A.DUB feature.

Memory-Stop Editing (Optional Remote Control Only, page 64)

You can set an automatic Dubbing stop point.

Optional

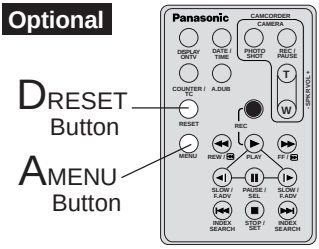

4 **Press PAUSE** to start Audio Dubbing.
- Connect the Palmcorder to the TV in order to monitor the sound. (See page 31.)

Only NTSC (National Television Standards Committee) recorded tapes can be audio dubbed. The following screen appears if the tape was not recorded in NTSC format.

5 **Press PAUSE** to stop Audio Dubbing.

- If the microphone used for dubbing gets too near the speaker of your TV, a howling noise (feedback) may occur.
- If the tape position is in or was started in in a blank section, you cannot use the A.DUB feature.

A **Press MENU** to display the VCR menu screen.

B **Rotate JOG KEY** to select DISPLAY SETTING, and then **press JOG KEY** to display the DISPLAY SETTING menu.

C **Rotate JOG KEY** to select DISPLAY, and then **press JOG KEY** to set to MEMORY.

D **Press MENU two times** to exit MENU mode. Then, **press RESET on the remote control** to reset the Counter Memory to M 0:00:00.

Now, rewind to the editing start point, and continue with steps 2-5. The tape will now stop automatically at “M 0:00:00”.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Copying your Tapes to S-VHS or VHS Cassette

Source (Playing) Palmcorder

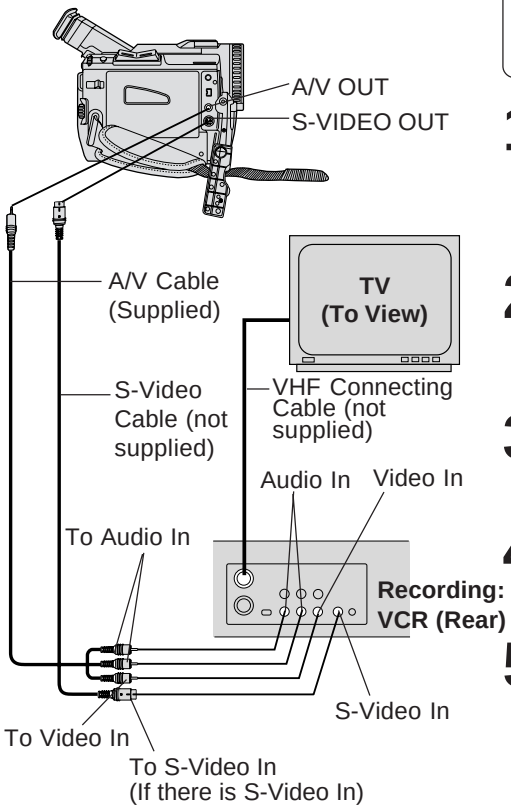

Before you begin

- Connect both Palmcorder and VCR to their power sources.
- Connect the Palmcorder to a VCR as illustrated left.
- Turn ON both units.
- **Set the recording VCR's Input Signal Selector to LINE.**
- Set the Palmcorder POWER Switch to VCR.

1 **Insert a pre-recorded tape** into the source (playing) Palmcorder and a blank tape, with record tab in place, into the target VCR (Recorder).

2 **Press PLAY** on the Palmcorder. When the tape reaches the point you want to start dubbing, **press PAUSE**.

3 **Place the VCR into REC/PAUSE mode.** (See VCR manual.)

4 **Simultaneously, press PAUSE** on both units to begin copying.

5 **Press STOP on both units** when copying is completed.

Monitor with your TV

- Turn the TV ON and select its VCR channel (either CH3 or CH4).
- Set the VCR/TV Selector on the recording VCR to VCR.

Note

- For technical reasons, dubbing a tape may reduce its quality.
- Press DISPLAY on the Palmcorder remote control (optional, page 64) to eliminate EVF/LCD Monitor indications.
- If the Time Code is displayed in the EVF or LCD monitor, it cannot be reset.
- Only the DATE/TIME, when displayed, will be recorded on the tape.

CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Special Features

You can transfer images from your Palmcorder tape to your PC (Personal Computer).

System Requirements:

- IBM PC/AT or compatible
- Intel Pentium II Processor: 266 MHz or more
- Windows 98/Me preinstalled PC with USB port
- RAM: 64 MB or more
- High color (16 bit) or more
- Resolution 800 x 600 (SVGA) or more
- 220 MB minimum available hard disk space (for ArcSoft Software)
- 15 MB minimum available hard disk space (for CARDLINK (for USB) or PHOTOVU LINK/Movie Messenger)
- 120 MB minimum available hard disk space (for USB Motion image capture)
- CD-ROM drive (for installation)
- Mouse or other pointing device

Palmcorder USB Device Driver : Software to connect your Palmcorder and your PC using USB Cable.

PHOTOVU LINK/Movie Messenger : Software to transfer images from your Palmcorder to your PC.

CARD LINK (for USB) : This software to transfer images between the Memory Card and your PC.

ArcSoft Software* : Following software is included: PhotoPrinter 2000 Pro, PhotoImpression 2000, Panorama Maker 2000.

*** For information on ArcSoft Software:**
TEL : 1-510-440-9901
FAX : 1-510-440-1270
Web Site : www.arcsoft.com
E-mail : support@arcsoft.com

Note

- The Windows 2000 driver is currently not available, but will be available in the future on our website at www.panasonic.com/video.

Software Installation (Windows 98/Me)

Caution

- Please install Palmcorder USB Device Driver first before connecting the Palmcorder and your PC using USB Cable. Once Palmcorder USB Device Driver is installed, you must restart your computer for installation to take effect.

1 Turn on the PC (Personal Computer) and start up Windows 98/Me.

2 Insert the supplied Software CD-ROM into the CD-ROM drive.

3 Select and click the icon you want to install.

Palmcorder USB Device Driver : Click

PHOTOVU LINK/Movie Messenger : Click

CARD LINK (for USB) : Click

ArcSoft Software : Click

4 Follow the instructions as they appear on your PC screen.

Note

- If a window does not appear automatically, click the “Start” button on your desktop and then click “Run”. When the Run box is open, type in “D:\InstMenu.exe” where “D:” is the drive letter of your CD; then click “OK”.
- If you attempt to install the next Software before the previous Software installation is completed, “Error” may appear. In this case, click [OK] and install the next Software from the menu.

One Touch Transfer

The images stored on the Memory Card can easily be transferred to the PC by pressing the TRANSFER Button.

Note

- Before using this feature, make sure the CARD LINK (for USB) monitor icon is displayed.
- Double clicking the CARD LINK Monitor icon displays a dialog box in which the save location for the collective transfer can be changed.

3 TRANSFER Button

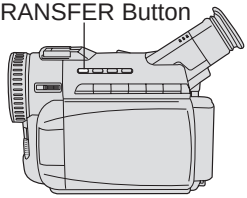

Before you begin

- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)
- Turn your PC on.

1 Set Palmcorder POWER to CAMERA or slide M-CARD Lock Switch to unlock and set to M-CARD. (See pages 9, 10.)

2 Connect the Palmcorder to your PC (Windows) using the USB Cable (supplied). (See page 54.)
- "CONNECT WITH PC" is displayed on the LCD monitor.

3 Press TRANSFER.
- CARD LINK (for USB) application is run automatically and images stored on the memory card are transferred to your PC and saved. (If an image to be transferred already exists, that image will be skipped over and not transferred.)

Note

- JPEG image format (only image data that can be played back on Palmcorder) can be transferred from the PC to the Palmcorder.

Running the CARD LINK (for USB)

You can transfer images between the Memory Card and your PC.

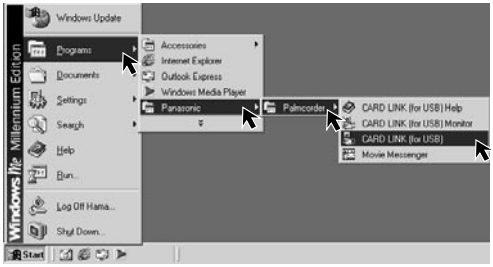

1 Repeat steps 1 and 2 above.

2 Click on Start, "Programs," "Panasonic," "Palmcorder," then "CARD LINK (for USB)."

3 "CARD LINK (for USB)" is opened.

Note

Refer to Help for information about application operations and Error messages.

While CARD LINK is running, do not perform the following operations...

The PC system may become unstable.
- Change the screen area or color pallet in the Display Properties window.
- Turn the Palmcorder power switch ON or OFF while connecting the Palmcorder to your PC using the USB Cable.
- Connect/disconnect the USB Cable.
- Insert/remove a Memory Card.

Using Memory Card Image Data (CARD LINK (for USB))

Pictures captured with Palmcorder can be transferred to your PC.

Note

- If, while transferring the image to your PC, the displayed picture appears abnormal, restart the PC application and turn Palmcorder POWER off, and then back on.

Before you begin

- Set POWER to OFF before inserting a recorded Memory Card. (See pages 32, 33.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to M-CARD. (See page 10.)
- Repeat steps 1 and 2 to run the CARD LINK (for USB). (See “Running the CARD LINK (for USB)” on page 55.)

1 **Select the image data** you want to transfer to your PC.
- The selected image will be underlined in green.

2 **Click on:**

Transfer
- The picture image is transferred to your PC and displayed. Transfer Dialog will appear on the PC. The image is captured when the full screen image appears on the PC.

Delete
- Confirmation Dialog will appear on the PC. Click “OK”. The selected images of the Memory Card are deleted.

Save
- The picture image is transferred to your PC and displayed. [Save as] dialog box will appear.

Using PC Image Data (CARD LINK (for USB))

You can use JPEG or Bitmap files from your computer for Photo Title (see page 38) by transferring them to the Palmcorder via PC connection.

1 **Click on “File,” then Click on “Open.”**
- At your PC, please select and open the data (. jpg or .bmp) you want to transfer to the Palmcorder.

2 **Click on “File,” select “Data out to camera,” then select Fine or Normal mode.**
- Your computer image data is transferred to the Palmcorder.

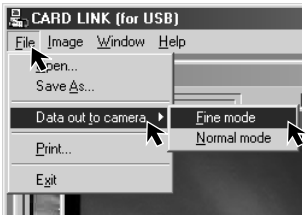

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Running the PHOTOVU LINK/Movie Messenger

You can transfer Motion images and Still images from your Palmcorder tape to a PC.

Before you begin

• Insert a recorded tape. (See page 9.)

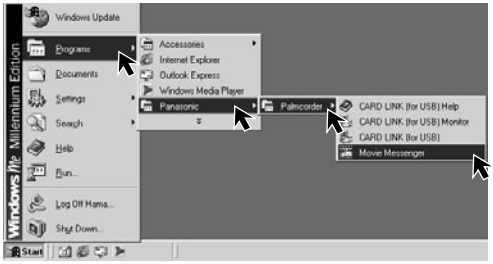

1 **Set Palmcorder POWER to VCR.**

2 **Connect the Palmcorder to your PC using the USB Cable (supplied) or DV interface Cable (i.LINK).**
(See pages 54, 62.)

3 **Click on "Start," "Programs," "Panasonic," "Palmcorder," then "Movie Messenger."**

4 **"PHOTOVU LINK/Movie Messenger" is opened.**

Note

Refer to Help for information about application operations and Error messages.

How to insert the USB Cable or DV Interface Cable (i.LINK)

A **Set Palmcorder POWER to VCR.**

B **Connect the Palmcorder to your PC using the USB Cable (supplied) or DV interface Cable (i.LINK).**

C **Start up the PHOTOVU LINK/Movie Messenger.**

How to remove the USB Cable or DV Interface Cable (i.LINK)

A **Close the PHOTOVU LINK/Movie Messenger.**

B **Remove the USB Cable or DV Interface Cable (i.LINK) from the Palmcorder.**

C **Set Palmcorder POWER to OFF.**

While PHOTOVU LINK/Movie Messenger is running, do not perform the following operations...

The PC system may become unstable.
- Change the screen area or color pallet in the Display Properties window.
- Turn the Palmcorder power switch ON or OFF while connecting the Palmcorder to your PC using the USB Cable or DV Interface Cable (i.LINK).
- Change the Palmcorder mode (VCR/CAMERA).
  *Close the application before changing the Palmcorder power switch.
- Connect/disconnect the DV Interface Cable (i.LINK).
- Connect/disconnect the USB Cable.

Using Tape Image Data (PHOTOVU LINK/Movie Messenger) (USB)

By connecting the Palmcorder and PC with the USB Cable, you can transfer Motion images and Still images saved on the DV Tape directly to your PC.

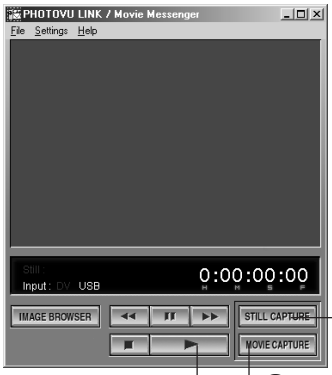

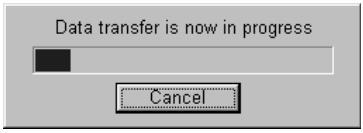

To capture Still images

3 **Click on [STILL CAPTURE]** at the point you wish to capture an image.
- Repeat step **3** to continue capturing images.
- Captured Still images are saved to the PC, and you can playback the saved images on the Image Browser. (See page 59.)

Before you begin

- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

1 **Repeat steps 1~4 on page 57** to run the PHOTOVU LINK/Movie Messenger.

Note
- When the USB Cable is connected, the input display will automatically become USB. If it is not USB, please confirm the connection. Then, close and restart the software.

2 **Click ▶ (PLAY) on PC screen** to playback the DV tape.
- The playback screen cannot be viewed on the PC. Please use the LCD monitor on the Palmcorder for confirmation.

To capture Motion images

3 **Click on [MOVIE CAPTURE]** at the start point you wish to capture a Motion image.

4 **Click [MOVIE CAPTURE] or [STOP]** to end capture.
- "Now Searching" is displayed.
- The DV Tape is rewound to the point at which the capture was started. The Motion image is then transferred to the PC.
- "Data transfer is now in progress" is displayed on the PC screen.
- The maximum capture time is approx. 30 seconds. Capture stops automatically at the end of 30 seconds.

Note
- Motion images cannot be captured if data contains the following...
  - A change between 12 bit and 16 bit.
  - A change between SP and LP mode.
- During transfer to the PC, the Motion images will not be displayed on the PC screen.
- Transfer takes from about 30 to 50 seconds for every 1 second of the Motion image.

5 To capture other Motion images, repeat steps **3**~**4**.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Playing back the saved Motion and Still images (PHOTOVU LINK/Movie Messenger)

You can playback the saved Motion images and Still images (see page 58) for confirmation.

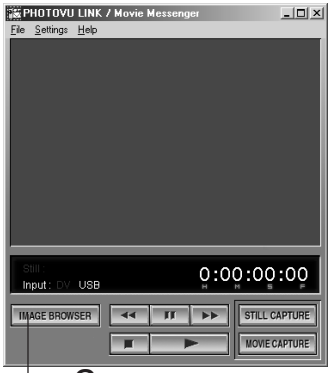

1 **Repeat steps 1~4 on page 57** to run the PHOTOVU LINK/Movie Messenger.

2 **Click [IMAGE BROWSER]** to display the Image Browser screen.

To view Motion images

3 **Click on [Movies].**
- The first part of each Motion image will be displayed as a list.

4 **Double click on the desired Motion image** to display the playback screen.
- Click ▶ to start Motion image playback.

To view Still images

3 **Click on [Pictures]** to display the Still image list.

4 **Double Click on the desired image to open it.**

Note
- If the image cannot be opened, please refer to the software Help menu.

To select the e-mail Software (PHOTOVU LINK/Movie Messenger

You can transfer and compress your Motion images and Still images as attachments to your e-mail easily.

Note

The e-mail Software must support MAPI (Messaging Application Programming Interface).
Below are some e-mail Software which support MAPI:
Microsoft Outlook, Microsoft Outlook Express, Netscape Messenger:

- Outlook(R) Express 5x, Outlook97, Outlook98
- Outlook Express 4x
- Othere MAPI applications [Netscape(R) Messenger 4.5x and so on]

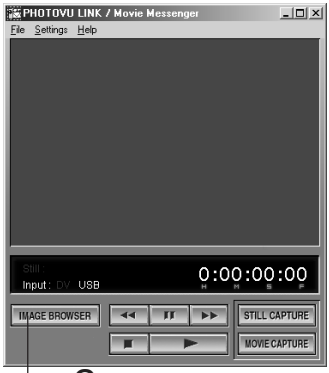

2 IMAGE BROWSER

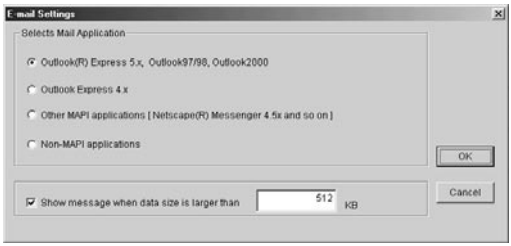

Before you begin

- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

1 **Repeat steps 1~4 on page 57** to run the PHOTOVU LINK/Movie Messenger. (See Note below.)

2 **Click [IMAGE BROWSER]** to display the Image Browser screen.

3 **Select "E-mail Settings" from "Settings".**

4 **Select the e-mail software you are using, then click [OK].**

Note

- If the e-mail software does not support MAPI, clicking on [E-mail] of Movie Messenger will not automatically run the e-mail software. Please run the e-mail software before doing step **1** above.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Attaching captured Motion and Still images to your e-mail

2 IMAGE BROWSER

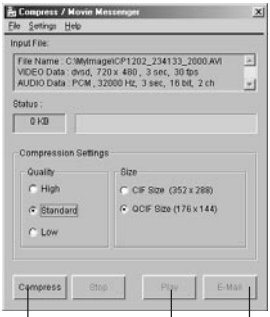

5 Compress 5 Play 6 E-Mail

Attaching Still images to e-mail

3 **Click on [Pictures]** to display the Still image list.

4 **Select the image to be attached, then click on [E-mail].**
- The e-mail software will be run automatically and the selected image will be attached to the e-mail. (See Note right.)

Before you begin
- Insert a recorded tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 54.)
- Turn your PC on. (See page 54.)
- Set Palmcorder POWER to VCR.

1 **Repeat steps 1~4 on page 57** to run the PHOTOVU LINK/Movie Messenger.

2 **Click [IMAGE BROWSER]** to display the Image Browser screen.

Attaching Motion images to e-mail

3 **Click on [Movies]** to display a Motion image list.

4 **Select the Motion image to be attached, then click on [Compress].**
- Follow the menu to perform the compression settings.

5 **Clicking on [Compress]** will compress the selected image.
- "Successfully Done" is displayed on the PC screen.
- Click [Play] to open the Movie Messenger Player screen. You can confirm the compressed Motion image by clicking on [Play].

6 **Clicking on [E-Mail]** will automatically attach the compressed Motion image to your e-mail. (See Note below.)
- When the recipient opens the file you sent, this Movie Messenger Player screen appears. By clicking [Play], they can view the Motion Image.

Movie Messenger Player screen

Note
- Movie Messenger Player works with Windows 95, 98, or Me only.
- If your e-mail software is not supported by MAPI, pressing the [E-Mail] button will automatically open the folder containing the compressed file. To attach, drag and drop the file into your e-mail.

PC Connection with DV Interface Cable (i.LINK)

A live image can be transferred directly to your PC (Personal Computer) via a DV Interface Cable (i.LINK) (not supplied) using products and software from a number of editing software companies including Digital Origin, Canopus, and Pinnacle.

Using Products from these companies allows you to capture and edit live images onto your PC using the DV interface (i.LINK).

For more detailed information regarding editing software products from these companies, please visit their websites at:
www.digitalorigin.com
www.justedit.com
www.pinnaclesys.com

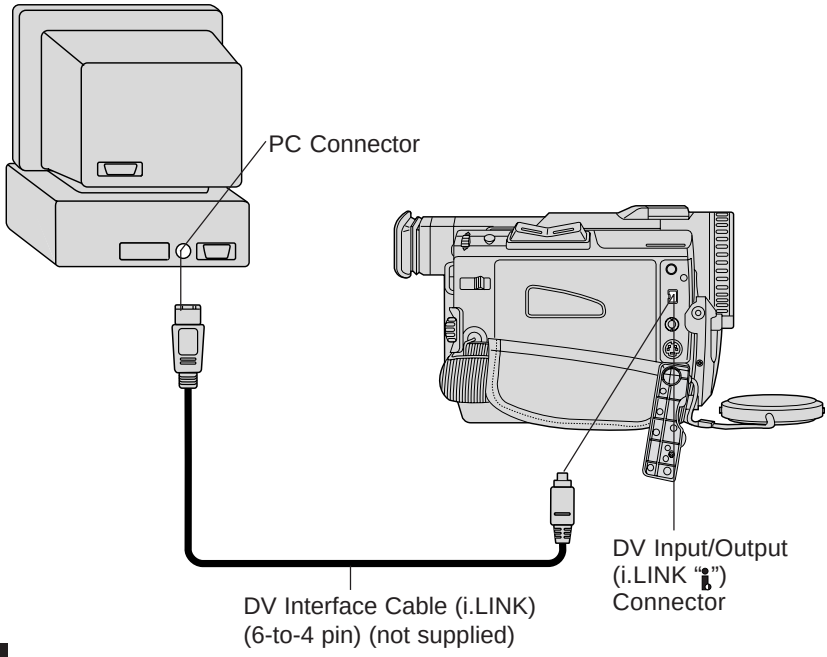

Note

- PC must be equipped with an i.LINK terminal.
- During Palmcorder playback, do not disconnect the DV Interface Cable (i.LINK) or turn the Palmcorder off as this may cause PC hang-up error to occur.
- For PHOTOVU LINK/Movie Messenger, do not use 2 i.LINK terminals on your PC at the same time.
- PHOTOVU LINK/Movie Messenger i.LINK (DV) operates normally with Windows 98SE or later operating system.
- PHOTOVU LINK/Movie Messenger i.LINK connection may not work with some DV Interface boards. In this case, use the software included with the board.
- 1394 (i.LINK) interface must conform to OHCI (Open Host Controller Interface Specification).

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Using Tape Image Data (PHOTOVU LINK/Movie Messenger)

By connecting the Palmcorder and PC with the DV Interface Cable (i.LINK), you can transfer Motion images and still images saved on the DV Tape directly to your PC.

Note

- If PHOTOVU LINK/Movie Messenger does not work, please refer to page 62.

Before you begin

- Insert a recorded Tape. (See page 9.)
- Make Palmcorder-PC connections. (See page 62.)
- Turn your PC on.
- Set Palmcorder POWER to VCR.
- **Run the Software after the DV Interface Cable (i.LINK) has been connected to the Palmcorder.**

1 **Repeat steps 1~4 on page 57** to run the PHOTOVU LINK/Movie Messenger.

Note

- When the DV Interface Cable (i.LINK) is connected, the input display will automatically become DV. If it is not DV, please confirm the connection. Then, close and restart the software.

2 **Click PLAY button on PC screen** to playback the DV tape.

- Please use the LCD monitor on the Palmcorder or PC screen for confirmation.

To capture Motion images

3 **Click on [MOVIE CAPTURE]** at the point you wish to capture a Motion image. Click on [STOP] to end capture.

- The image is recorded to the PC in real time.
- The maximum capture time is approx. 3 minutes.
- When capturing data containing changes between 12 bit and 16 bit and/or between SP and LP mode, a separate file will be made for each mode.
- Please refer to pages 59~61 for other functions.

To capture Still images

3 **Click on [STILL CAPTURE]** at the point you wish to capture an image.

- Repeat step **3** to continue capturing images.
- Captured Still images are saved to the PC, and you can playback the saved images on the Image Browser.

Palmcorder Accessory System

Accessory #	Figure	Description	Price
PV-DAC11		AC Adaptor with AC Cable and DC Cable	$120.00
CGR-D08A/1B (Replaces CGR-D120A/1B)		800mAH / 1 h 30 min, Battery Pack	$69.95
CGR-D16A (Replaces CGR-D220A/1B)		1600mAH / 3 h, Battery Pack	$99.95
CGP-D28A1B		2800mAH/ 5 h, Battery Pack	$129.95
CGR-D53A/1K (Replaces CGR-D815A/1B)		5300mAH / 9 h, Battery Pack	$229.95
PV-DDC9		DV Interface Cable (i.LINK) (4-pin to 4-pin)	$55.00
PV-DLT9		Color Enhancement Light	$39.95
PV-DRC9		IR Remote Control	$29.95
PV-H150		Carrying Case	$49.95
PR-SD064		64 MB SD Memory Card	$179.95
PR-SD032		32 MB SD Memory Card	$119.95
PR-SD016		16 MB SD Memory Card	$79.95
BN-SDCAPU/1B		SD USB Reader/Writer (compatible with MultiMediaCard)	$79.95
BN-SDABPU/1B		SD PCMCIA Adaptor (compatible with MultiMediaCard)	$79.95

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Concerning the MultiMediaCard and SD Memory Card

MultiMediaCard

The MultiMediaCard is a compact, lightweight and removable external memory card. A great many fun-filed titles (preset titles) have been recorded on the supplied MultiMediaCard.
These preset titles will also be erased when the Card is formatted.

SD Memory Card

The SD Memory Card (optional), which is the same size as the MultiMediaCard, is an external memory card with an even bigger memory capacity. It has a write protect switch to prevent the data writing and card formatting, and it comes with a copyright protection function that complies with the SDMI (Secure Digital Music Initiative) standard. Music play is possible only with an SD Memory Card.

- SD Logo is a trademark.
- Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.

Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # _____

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
			Subtotal	
			Your State & Local Sales Tax	
			Shipping & Handling	6.95
			Total Enclosed	

3. Method of payment (check one)

☐ Check of Money Order enclosed (NO C.O.D.SHIPMENTS)

☐ VISA Credit Card # _____

☐ MasterCard Expiration Date _____

☐ Discover Customer Signature _____

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:
Mr.
Mrs.
Ms. _____
First Last

_____
Street Address

_____ _____ _____
City State Zip

Phone #:
Day ( ) _____
Night ( ) _____

TO OBTAIN ANY OF OUR PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER
OR
CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368
[6 AM-5 PM M-F, 6 AM-10:30 AM SAT, PACIFIC TIME]
OR
MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY ORDER OFFICE
20421 84th Avenue South Kent, WA. 98032

Cleaning EVF (Electronic Viewfinder)

[PV-DV201]

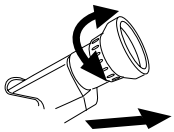

1 Turn the Eyepiece counterclockwise 1/8 of a turn.

2 Pull the Eyepiece free. Remove any lint or dust particles with a soft, clean cloth being careful not to scratch the glass surfaces.

3 **To re-install the Eyepiece**
Line up the marks on the Eyepiece with the grooves inside the EVF shaft and attach. Turn it clockwise 1/8 of a turn to lock in place.

[PV-DV401]

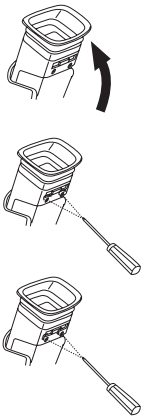

1 Slide the Viewfinder backward to its fully expanded position and then tilt it upward.

2 Remove the 2 screws from the EVF Eyepiece with a screwdriver (+).

3 Turn the Eyepiece counterclockwise 1/8 of a turn.

4 Pull the Eyepiece free. Remove any lint or dust particles with a soft clean cloth being careful not to scratch the glass surfaces.

5 **To re-install the Eyepiece**
Line up the marks on the Eyepiece with the grooves inside the EVF shaft and attach. Turn it clockwise 1/8 of a turn to lock in place.

6 Replace the EVF Eyepiece screws and tighten with a screwdriver.
- If you lose an EVF Eyepiece screw, order Part No.XQN2+BJ5FXK.

Approximate Brightness Values

Your Palmcorder has been designed for normal scene illumination of 150 footcandles (1500 lx). However, the Palmcorder may be used at F1:1.6, if illumination is more than 0.5 footcandles (5 lx).
The table below shows the color temperature for reference.

PALMCORDER SETTINGS	NATURAL LIGHT CONDITIONS	KELVIN COLOR TEMPERATURE	ARTIFICIAL LIGHT SOURCE	COLOR TINT MIXTURE
(Amber Filter Range)	• Fair weather, blue sky	10,000	• Color television	Bluish
	• Slightly cloudy sky	8,000		
	• Cloudy or rainy sky	7,000		
		6,500	• Fluorescent lamp (Daylight)	
	• Sunlight in clear weather at midday	6,000	• Camera flash bulb	
		5,500		
"OUTDOOR"	• Average sunlight in clear weather	5,000	• Blue lamp for photography	
	• Sunlight 2 hours after sunrise and before sunset	4,500	• Fluorescent lamp (White)	Whitish
"AUTO"		4,000	• Normal flash bulb	
		3,500	• Fluorescent lamp (Off-white)	
	• Sunlight 40 min. after sunrise and before sunset	3,200	• Tungsten lamp for photography	
	• Sunlight 30 min. after sunrise and before sunset	2,800	• Halogen lamp • Iodine lamp	
	• Sunlight 20 min. after sunrise and before sunset		• Tungsten lamp • Acetylene lamp • Kerosene lamp	Yellowish
		2,000	• Candlelight	Reddish

Specifications

Power Source:	Palmcorder: 7.2 V DC (Battery) 7.8 V DC (AC Adaptor) AC Adaptor: 110/120/220/240 V AC, 50/60 Hz Battery: Lithium-Ion Type DC 7.2 V
Power Consumption:	Palmcorder: 7.2 V DC 6.5 W (Max. 9.5 W) AC Adaptor: 18 W 1 W (when not in use.)
Digital Interface	USB/i.Link (IEEE1394)
Video Signal:	EIA Standard (525 lines, 60 fields) NTSC color signal
Video Recording System:	2 rotary heads. helical scanning system
Audio:	12 bit (32 kHz) 4 tracks 16 bit (48 kHz) 2 tracks
Pick-Up System and Device:	One integral color filter Charge Coupled Device (CCD)
Lens:	20:1 zoom lens, F1:1.6 with auto iris control Focal length: 3.6 mm - 72 mm Power zoom function Lens filter diameter: 43 mm
Viewfinder:	0.4 inch (10.2 mm) Electronic Viewfinder **(PV-DV201)** 0.44 inch (12.7 mm) Liquid Crystal Electronic Viewfinder **(PV-DV401)**
LCD Monitor:	2.5 inch (63.5 mm) Liquid Crystal Display **(PV-DV201)** 3.0 inch (76.2mm) Liquid Crystal Display **(PV-DV401)**
Minimum Illumination Required:	5 lx (F1:1.6) 0.5 footcandles 0 lx (MAGICVU/0LUX ON) **(PV-DV401 only)**
Image Storage (supplied 8 MB MultiMediaCard)	320 x 240 pixels (NORMAL mode) 640 x 480 pixels (FINE mode) Approx. 240 images (NORMAL mode) Approx. 60 images (FINE mode)
Image Format	JPEG (Design Rule for Camera File System)
Operating Temperature:	32 °F~104 °F (0 °C~40 °C)
Operating Humidity:	10 %~75 %
Weight:	Palmcorder: **(PV-DV201)** 1.50 lbs. 0.68 kg **(PV-DV401)** 1.45 lbs. 0.66 kg AC Adaptor: 0.35 lbs. 0.16 kg
Dimensions:	Palmcorder: **(PV-DV201)** 3-3/8 (W) x 4-1/4 (H) x 7-1/2 (D) inch 85 (W) x 107.5 (H) x 191 (D) mm **(PV-DV401)** 3-3/8 (W) x 4-1/4 (H) x 6-1/2 (D) inch 85 (W) x 107.5 (H) x 166 (D) mm AC Adaptor: 2-3/4 (W) x 1-3/4 (H) x 4-1/2 (D) inch 70 (W) x 45 (H) x 115 (D) mm

Weight and dimensions shown are approximate.
Designs and specifications are subject to change without notice.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Cleaning Care for Video Heads

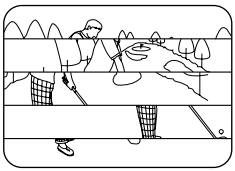

Clogged Video Head

(a) Video Head Cleaning: Normally, your Palmcorder will not require head cleaning. However, it is possible that the heads may become clogged due to dust in the air, playing damaged tapes, long term use, etc. If “NEED HEAD CLEANING” appears for 5 seconds in the EVF or LCD monitor, the heads may require cleaning.

(b) Cleaning the Heads: It is recommended that head cleaning be performed by a qualified service technician. Please contact your nearest Panasonic Servicenter. An alternate solution is to obtain a head cleaning cassette. Please use Panasonic cleaning cassette (AY-DVMCL). Be sure to follow the cleaning instructions carefully. Excessive use of the head cleaning cassette could shorten video head life.
Use this cassette only when a head clogging symptoms occur.

Refer servicing to qualified service personnel.

Tape Operations Caution

- When you go from function to function (PLAY, FF, REW etc.), please note that the unit will not accept a new function operation until the previous operation is complete.
- The POWER Button and all function buttons, (PLAY, FF, REW, etc.) are only operational after the tape has been completely loaded.

Lens Hood Area Operation Caution

When the following accessories are attached and the zoom is set to maximum wide angle, the four corners of the sceen may appear darker:
- Wide or Telephoto conversion lens (optional).
- A filter (optional), etc. and then the lens hood.
- Two filters (optional).

Self Diagnostic System

If any of the following numbers appear on-screen, the Palmcorder may need service. Do not remove the battery (if attached) and write down the displayed number on page 71. Then, take the Palmcorder to a servicenter for repair.

Error No.	Description
U11	Card Error
U12	Card Error
U13	Card Error
U14	Card/Palmcorder Dialogue Error
U15	No Card Memory
U16	Captured image limit exceeded
U17	Captured image limit exceeded
U30	Error other than above

Before Requesting Service

If you have a problem with your Palmcorder, it may be something you can correct yourself.
Check the list below for symptoms and corrections.

Symptom	Correction
No picture in the EVF or LCD Monitor...	• Make sure the Power Source is connected. (pp. 11, 12) • Make sure the POWER switch is set to VCR or CAMERA. (pp. 22, 27) • Check the Dew Indicator. (p. 21) • Make sure the Battery is fully charged. (p. 11) • Make sure all necessary cables are connected correctly and firmly. (p. 12) • Make sure the Lens Cap is removed. (p. 22)
Video cassette cannot be inserted...	• Make sure the Power Source is connected. (pp. 11, 12) • Insert the cassette record tab up, window side facing out. (p. 9)
Video cassette cannot be removed...	• Make sure the Power source is connected. (pp. 11, 12)
No operation starts when operation buttons are pressed...	• Check the Dew Indicator. (p. 21)
Recording cannot be done...	• Make sure the record tab is closed. (p. 6) • Check the Battery Indication. (p. 19)
Auto Focus does not operate...	• Make sure FOCUS is set to AUTO. (p. 47) • Make sure the unit is ON and set to CAMERA mode. (p. 22)
Sound from microphone cannot be monitored...	• Make sure the unit is set to REC or REC/PAUSE mode.
Sound cannot be heard...	• Make sure the Audio on the VCR MENU is set to ST1. (pp. 17, 50)

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Please photocopy this form when making a request for service notice.

Request for Service Notice:

In the unlikely event this product needs service.

- Please include your **proof of purchase**. (Failure to due so will delay your repair.)
- To further speed your repair, please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company
1705 N. Randall Road
Elgin, IL. 60123-7847
Attn: Camcorder Repair

Please write the displayed Self Diagnostic number here. (See page 69.)

Index of Controls

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com

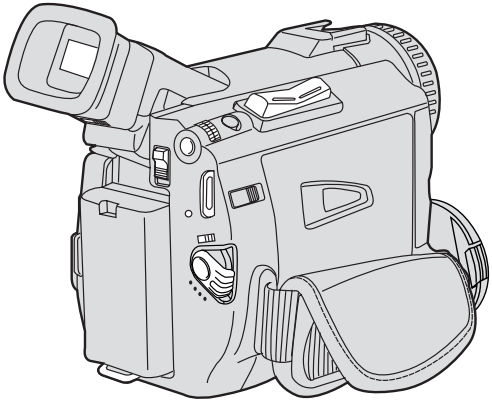

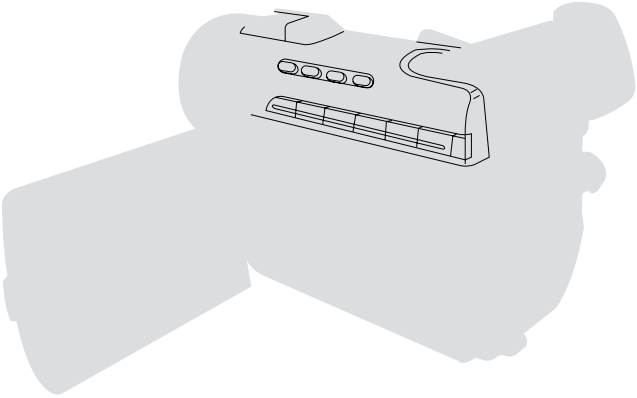

Index of Controls

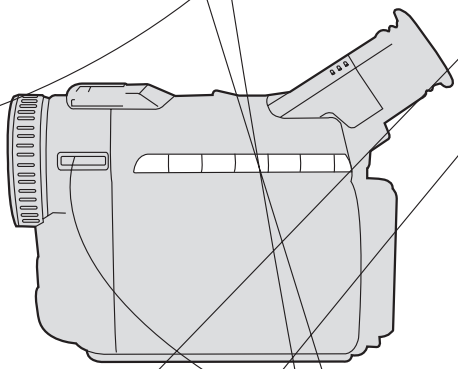

For assistance, please call : 1-800-211-PANA(7262) or
send e-mail to : consumerproducts@panasonic.com

Color Enhancement Light (Optional)

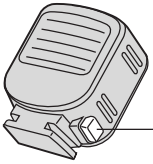

LIGHT RELEASE Button
See page 7.

LIGHT Button
See page 7.

Remote Control (Optional)

DATE/TIME Button
See pages 20, 25.

DISPLAY ON TV Button
See pages 25, 31.

A.DUB Button
See pages 25, 49.

COUNTER/TC Button
See pages 19, 25.

RESET Button
See pages 25, 50.

REWIND/SEARCH Button
See pages 25, 28.

MENU Button
See pages 13, 14, 50.

REVERSE SLOW/ F. ADV Button
See pages 25, 28, 29.

REVERSE INDEX SEARCH Button
See pages 25, 30, 41.

STOP Button
See pages 25, 27.
SET Button
See pages 13, 14, 25.

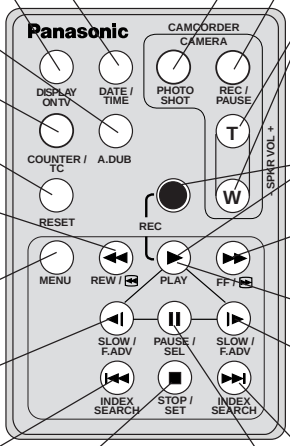

PHOTOSHOT Button
See pages 25, 41.

REC/PAUSE Button
See pages 22, 25.

POWER ZOOM Switch
See pages 22, 25.
SPKR VOL +/–
See pages 25, 27.

VIDEO REC Button
See pages 25, 52.

FAST FORWARD/ SEARCH Button
See pages 25, 28.

PLAY Button
See pages 25, 27, 52.

FORWARD SLOW/ F. ADV Button
See pages 25, 28, 29.

FORWARD INDEX SEARCH Button
See pages 25, 30, 41.

PAUSE Button
See pages 25, 28, 52.
SEL Button
See pages 13, 14, 25.

Limited Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America, One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park Carolina, Puerto Rico 00985

PANASONIC Video Products

Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR	SERVICE	CONTACT NUMBER
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
VCR	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
MONITOR-VCR Combination	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	Carry-In: 21" CRT and Smaller In-home or carry-in: 22" CRT and Larger	1-800-211-PANA(7262)

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free contact number listed above, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is requires before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO RECORDING MEDIA) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED

WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 8/8/2000

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquires please contact:
1-800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7am, EST.
or send e-mail : consumerproducts@panasonic.com

Web Site: http://www.panasonic.com
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, Master Card, Discover Card, American Express, Check)

Product Repairs

Centralized Factory Servicenter

MAIL TO : Panasonic Services Company
1705 N. Randall Road,
Elgin, IL 60123-7847
Attention: Digital Camera Repair

Please carefully pack and ship, prepaid and insured, to the Elgin centralized repair Factory Servicenter. While there will be added handling delays, you may bring your unit to one of the following locations who will then forward the unit to Elgin for repair.
Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

Factory Service Center Locations

CALIFORNIA
6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO
1640 South Abilene
Street Suite D
Aurora, CO 80012

FLORIDA
3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA
8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS
9060 Golf Road
Niles, IL 60714

1703 North Randall Road
Elgin, IL 60123
(Pick-up / Drop-off only)

MARYLAND
62 Mountain Road
Glen Burnie MD 21061

MASSACHUSETTS
60 Glacier Drive,
Suite G
Westwood, MA 02090

MINNESOTA
7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO
2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA
2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

TEXAS
13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON
20425-84th Avenue
South
Kent, WA 98032

HAWAII
99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808) 488-1996
Fax (808) 486-4369

Service in Puerto Rico
Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:
Ave. 65 de Infanteria. Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

As of January 2001

Inserte de la batería

Antes de comenzar
- Cargue la battería. (Página 11.)

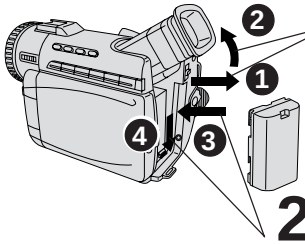

1 **Deslice el visor hacia atrás,** haste la posición de totalmente extendido, y luego inclínelo hacia arriba. (PV-DV201: **Incline el visor hacia arriba.**)

2 **Coloque la batería** y deslicela hacia abajo hasata que quede bloqueada con un clic.

Inserte el Cassette

1 **Ajuste el interruptor de alimentación (POWER) a la posición VCR o CAMERA.**

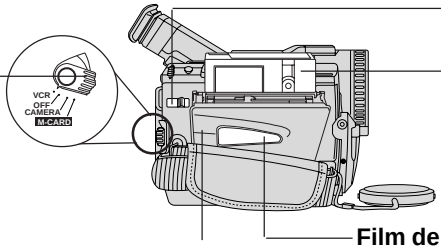

2 **Deslice el interruptor de expulsión de cinta (TAPE EJECT)** para abrir la tapa del compartimento del cassette.

3 **Introduzca un cassette con la parte de la ventana hacia arriba.**
- Asegúrese de que la lengüeta de grabación esté cerrada. (Página 6.)

Film de protección

4 **Presione la marca PUSH TO CLOSE (EMPUJAR PARA CERRAR)** para cerrar la tapa del compartimiento del cassette**.**

Nota
- Retire la película protectora antes de utilizarlo.

Grabación con la cámara

Cuando el monitor LCD se enchuentra totalmente abjerto, el visor se DESACTIVA automàticamente.

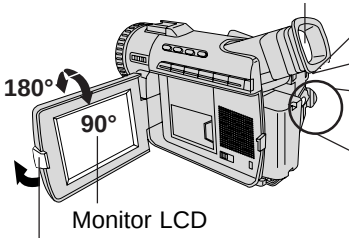

2 **Ajuste el control lde ajuste de visión según lo desee.**



[PV-DV401] **[PV-DV201]**

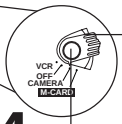

1 **Ajuste el interruptor de alimentación (POWER) a la posición CAMERA.**

3 **Presione el botón de apertura del LCD (LCD-OPEN)** para des bloquear el monitor LCD. **Balancée abriéndolo completamente y ajuste el àngulo.**

4 **Presione el botón de grabación/ pausa (REC/PAUSE)** para iniciar la grabación.
Vuelva a pulsar el botón de grabación/pausa (REC/PAUSE) para hacer una pausa en la grabación.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Introducir la Tarjeta de memoria*

Antes de comenzar
• Cargue la battería. (Pàgina 11.)

*Tarjeta de Memoria: Tarjeta MultiMedia o Tarjeta de Memoria SD (Pàgina 64.)
• Asegúrese de introducir la Tarjeta de memoria antes de utilizar la tarjeta PhotoShot. (Página 32.)
A continuación se indican una lista de Tarjetas de Memoria soportadas por esta unidad.

Tarjeta de memoria	Capacidad
Tarjeta MultiMedia (LSFT0198A) (suministrado)	8 MB
Tarjeta MultiMedia (Marca de fábrica SanDisk)	8 MB, 16 MB
Tarjeta de Memoria SD (opcional) (Página 64.)	16 MB, 32 MB, 64 MB

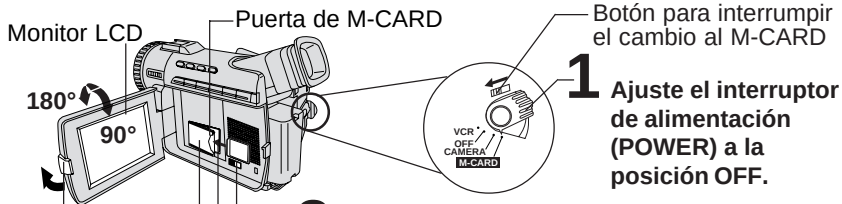

1 **Ajuste el interruptor de alimentación (POWER) a la posición OFF.**

2 **Presione el botón de apertura del LCD (LCD-OPEN)** para desbloquear el monitor LCD. **Balancée abriéndolo completamente y ajuste el àngulo.**

3 **Deslice el CARD EJECT Switch (interruptor de EJECUCIÓN DE TARJETA)** para abrir la puerta de M-CARD.

4 **Introducir la Tarjeta de memoria.**

5 **Cierre la puerta de M-CARD.**

Para ver la reproducción en el LCD (pantalla de visualización de cristal líquido)

Cuando el monitor LCD se enchuentra totalmente abierto, el visor se DESACTIVA automáticamente.

Antes de comenzar
• Cargue la battería. (Pàgina 11.)

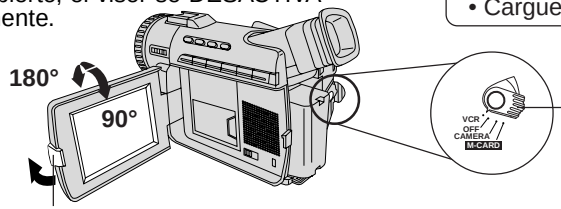

1 **Ajuste el interruptor de alimentación (POWER) a la posición VCR.**

2 **Presione el botón de apertura del LCD (LCD-OPEN)** para des bloquear el monitor LCD. **Balancée abriéndolo completamente y ajuste el ángulo.**

3 **Presione el botón de rebobinado (REW)** para rebobinar la cinta.

4 **Presione el botón de reproducción (PLAY)** para reproducir la cinta.

5 **Presione el botón de parada (STOP)** para detener la reproducción.

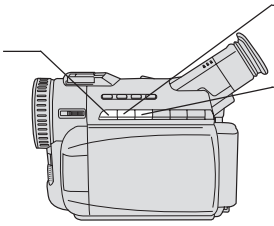

Index

A

AC Adaptor 6, 11, 12, 64
Accessories (Optional) 64
Accessories (Supplied) 6
A/V Cable 6, 31, 51
Audio/Video Fade In/Out 48
Auto Focus 47

B

Backlight 47
Battery Pack 6, 9, 11, 64
Battery Remaining Indication 19
Battery Warning 21
Before Requesting Service 69, 70
Blank Search 25

C

CARD EJECT Switch 10
Camera Recording 22, 23, 24, 25
Cleaning Care for Video Heads 70
Clock Battery 21
Clock Set 13
Color Enhancement Light 7, 64
Copying from Digital Equipment 52
Copying your Tapes 51

D

Date and Time Indication 20
DC Power Cable 6, 12, 64
DEW Indication 21
Digital E.I.S. 39
Digital Functions 44
Digital PhotoShot 41
Digital Video Cassette Tape 6
Digital Zoom 40
Dubbing over Audio (Microphone) 49, 50
DV Interface Cable (i.LINK) 52, 62, 64

E

Edit Search 24
Erase Protection Tab 6
EVF/LCD Monitor Indications 19, 20, 21

H

Hand Strap 8
High Speed Shutter 48

J

Jog Search 29

L

Lens Cap 6, 8, 22
Limited Warranty 76

M

Macro Focus 47
MAGICVU/0LUX Switch 42
Manual Focus 47
Memory Counter 19
MENU OSD 14, 15, 16, 17, 18
Memory Card 6, 10, 64
M-CARD Door 10

P

PC Cable 6, 54
PC Connection 54, 62
Picture in Picture (PinP) 45
PLAY Indicator 20
Playback 27, 28, 29, 30, 31
Power Supply 11, 12
Program AE 43

R

REC Indicator 20
Recording Still Pictures 42
Remote Control 25, 26, 64
Request for Service Notice 70

S

Safety Precautions 2
Servicenter List 77
Set the Date and Time 13
Shoulder Strap 6, 8
Special Effects Playback 28, 29, 30
Specifications 67
STILL Picture 28
Strobe Multi Mode 46

T

Tape Remaining Indications 19
Tape Speed 6
Tape Warning 21

V

VHF Connecting Cable 51
Volume Display 27

W

White Balance 42

Z

Zoom In/Out 40

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094

Panasonic Sales Company (“PSC”), Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

P

Printed in Japan
LSQT0364A
S1200A0